

INSTRUCTION SHEET for MODEL ZVW 271 201 For VW Type 2

CAPACITY: 6 pairs of skis.

ASSEMBLY — (See Sketch #1)

1. Assemble the gutter hooks, adjusting clips, and rubber protectors to the end brackets as shown. Use the shorter carriage bolts for the gutter hooks. Do not tighten any of the wing nuts.
2. Slide these assemblies onto the carrier bars. Tighten the wing nuts just enough to keep the brackets in place.


TO MOUNT THE CARRIER ON THE CAR — (See Sketch #2)

1. Set the carrier on the roof and slide the brackets along the bars until the brackets rest in the rain gutters. Tighten the wing nuts to lock the brackets against the bars.
2. Hook the gutter hooks under the rain gutter and tighten the knobs.


— The gutter hooks will fit most cars as is. If the car doors fit tight against the rain gutters, scrape the plastic coating from the gutter hooks.

TO MOUNT THE SKIS

Open the latch arms and load the skis with the tips to the rear. Several slots are provided in the latches to provide adjustment for skis of various thickness.

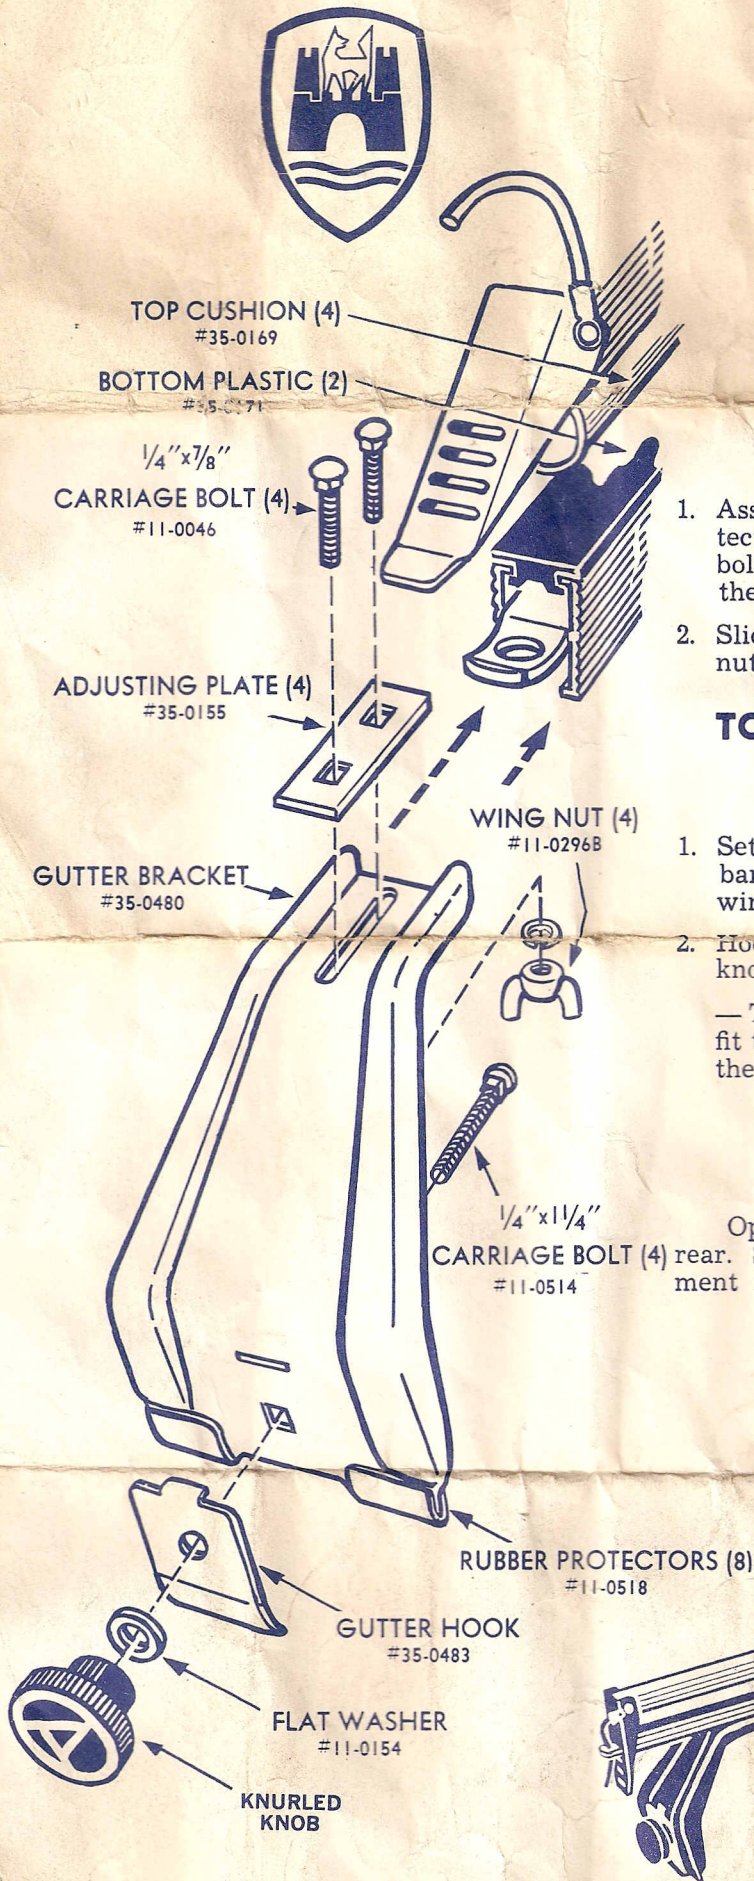

SKETCH #1

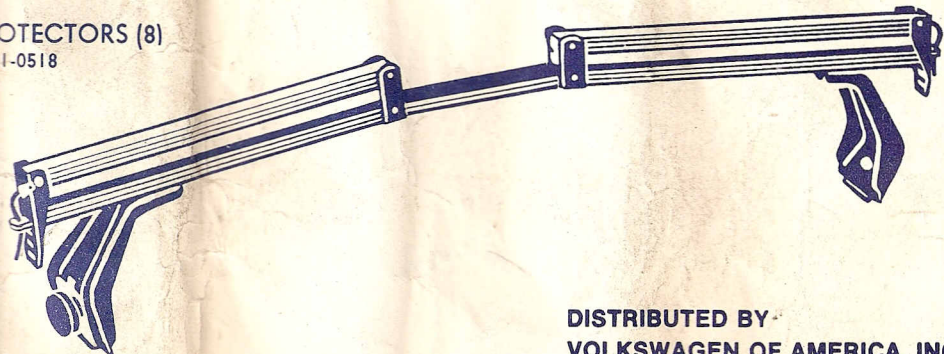

DISTRIBUTED BY
VOLKSWAGEN OF AMERICA, INC.

MANUFACTURED BY
MARKET FORGE COMPANY