
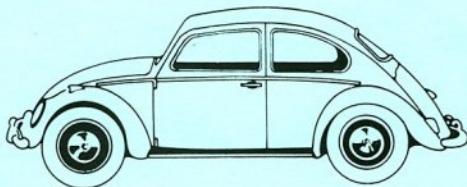


SERVICE MANUAL

South Wind

**GASOLINE
HEATERS**

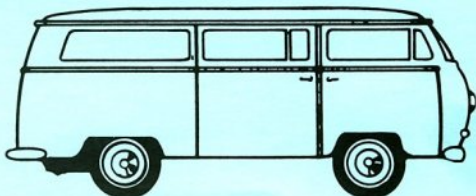

**FOR
VOLKSWAGEN**

ENERGY TRANSFER PRODUCTS • FLUID POWER • HEAT TRANSFER • COMBUSTION ENGINEERING

SYMBOL OF

South Wind
DIVISION

SW

STEWART-WARNER CORPORATION

South Wind SERVICE MANUAL AND PARTS CATALOG


TABLE OF CONTENTS

Section No.	Title	Page	Section No.	Title	Page
	INTRODUCTION	1	III. SERVICE AND REPAIR		11
I.	GENERAL DESCRIPTION	8	Trouble Shooting Chart	11	
II.	HEATER COMPONENTS	8	Heat Exchanger and Burner Assembly	12	
	Heat Exchanger and Burner Assembly ...	8-9	Combustion Air Blower Assembly	12	
	Combustion Air Blower Assembly	9	Ventilating Air Blower Assembly	13	
	Ventilating Air Blower Assembly	9	Fuel Pump	13	
	Heater Fuel Pump	9	Ignition Coil, Breaker Points and Cam ..	13	
	Ignition Coil, Breaker Points and Cam ...	9	Thermostat	13	
	Thermostat	9	Overheat Switch	13	
	Overheat Switch	10	Heater Relay	14	
	Heater Relay	10	Flame Detector Switch and	14	
	Flame Detector Switch and		Fuel Safety Valve	14	
	Fuel Safety Valve	10-11	Service Tools	14	
			Wiring Diagrams	14-15	
			IV. PARTS CATALOG	16-50	

LIST OF ILLUSTRATIONS

Fig. No.	Title	Page	Fig. No.	Title	Page
1	Heater installed in 1200 cc Station Wagon - Kit Model 8332	2	14	Wheel Well Cover Kit 736490 installed	4
2	Heater installed in 1500cc Transporter Prior to 1966	2	15	Defroster Kit Installed Kit 736470	4
3	Air Distribution installed in Station Wagon Prior to 1969	2	16	Model 8349A - Sedan	4
4	Heater shown without Cover Shield Kit Model 8331	2	17	Model 8349A - Model 1600 Type III -- Square Back	4
5	Double-Cab Pick-Up Truck Heater Installation - Kit Model 8330	2	18	Model 8349A Karmann Ghia	4
6	Sedan Heater Installation Kit Model 8343	2	19	Model 8347 - Model 1500 Type III -- Fast Back	5
7	Sedan Heater Installation Kit Model 8341	3	20	Model 8345C - 1961-65 Sedan	5
8	Sedan Heater Installation Kit Model 8345	3	21	Model 8332B-12V -- Transporter ..	5
9	Ventilating Blower Installation Models 8341, 8343 and 8345	3	22	Model 8335 Pick-Up Truck Heater ..	5
10	Sedan Heater Installation Kit Model 8345-B	3	23	Model 8349 Series - Sedan 1961-67 ..	5
11	Karmann Ghia Heater Installation Kit Model 8342	3	24	Model 8349 Series - Karmann Ghia 1961-67	5
12	Karmann Ghia Heater Installation Kit Model 8346	3	25	Model 8349 Series Karmann Ghia 1968 and later	6
13	Air Distribution Installation Kit Model 736410	4	26	Model 8349 Series - Karmann Ghia ..	6
			27	Model 8349 Series - Fast Back and Square Back	6
			28	Model 8349 Series - Fast Back and Square Back	6
			29	Model 8349 Series - Sedan 1961-67 ..	6
			30	Model 8349 Series - Sedan	6

Fig. No.	Title	Page	Fig. No.	Title	Page
31	Model 8349 Series Sedan 1968 and later	7	65	Kit Model 8349A, 8349B-6V and 8349B-12V	33
32A	Fuel Connection	7	66	Heat Exchanger and Burner Assy. .	34
32B	Fuel Connection	7	67	Heat Exchanger and Burner Assy. .	34
33	Switch	7	68	Heat Exchanger and Burner Assy. 736788, 736788-2, 737584 and 737685 Used on Kit Models	
34	Flow System	8		8345-B, 8345C, 8345C12, 8349A, 8349B6V, 8349B12V	35
35	Sketch of Transporter Heater	9	69	Heater Assembly for Kit Model 735900 and 8341	35
36A	Heater Fuel Pump Sectional View ..	9	70	Heater Assembly 736910-6V & 736910-2 (12V) Models 8335 and 8335-12	36
36B	Heater Thermostat	10	71	Heat Exchanger and Burner Assy. 736942(6V) and 736942 (12V) Used on Models 8335 & 8335-12..	36
37	Flame Detector Switch	10	72	Model 8347 Heater Assembly 736884 (6V) and 736884-2 (12V)..	36
38	Sectional View of Fuel Safety Valve ..	10	73	Heater Assy for Kit Models 8342- 8343 (736478) 8345-8346 (736653)	37
39	Check Plug Alignment and Gap	12	74	Heater Assy 737593 Used on 8349 A & B	37
40	Spark Plug Gage	14	75	Ventilating Air Blower and Mounting Plate Assembly	38
41	Fuel Pressure Gage	14	76	Vent Air Blower Assy 735945, 736488 and 736654 Used on Kit Models 735900, 8341, 8343, 8345	38
42	Test Light	14	77	Ventilating Air Blower Assembly 736469-736672 Used on Kit Model 8342	38
43	Wiring Diagram	15	78	Ventilating Blower Assembly 737587- 737681 and Subassembly 737585- 737682 -- Model 8349	39
44	Wiring Diagram Kit Model 8334 ...	15	79	Ventilating Blower 736921 Model 8335	39
45	Wiring Diagram Types 1 and 3	15	80	Ventilating Blower 736881 & 736884 Used on Model 8347	39
46	Kit Model 736026, 8332, 8332-6V 8332-12, 8333	16	81	Combustion Air Blower Assembly..	40
47	Kit Model 8332B-12V	17	82	Breaker Points Assembly 735923 ..	40
48	Kit Model 8330	18	83	Burner Assembly	40
49	Kit Model 8331	19	84	Defroster Kit Pt. No. 736470	41
50	Kit Model 8334, 8334-12V and 737618-737665 Kits	20	85	Air Distribution Accessory Kit Part No. 736410	41
51	Heater and Bracket Assembly 736624-1-2-4-5 & -6 Used on Kit Models 8330-8331-8332 (6V) 8332-12 and 8332B-12V	21			
52	Heater and Bracket Assembly 736380 and 736380-4 Used on Kit Model 8334 and 8334-12V	22			
53	Kit Model 736900	23			
54	Kit Model 8341	24			
55	Kit Model 8342	25			
56	Kit Model 8343	26			
57	Kit Model 8345	27			
58	Kit Model 8345B	28			
59	Heater Assembly 736783 Used on Kit 8345B	28			
60	Kit Model 8346 and 8346-12	29			
61	Kit Model 8347 and 8347-12	30			
62	Kit Model 8335 and 8335-12	31			
63	Kit Model 8345C and 8345-C12 & 12V	32			
64	Heater Assembly 736980 and 736980-2 and on 8345-C and 8345C12.....	32			



INTRODUCTION

All South Wind Heaters for Volkswagen are similar in basic principle of operation. The primary differences are in the physical design characteristics for adapting to the various models of automobiles in which they are to be installed.

Heater Models produced for the 1968-69 heating season beginning September, 1968, are:

S-W/VW Model No.	Application
8332-6V /ZVW256266	6V Transporter
8332-12V /ZVW256269	12V Transporter
8334-12V /ZVW256268	12V School Bus
8349B-6V /ZVW256366	6V Sedan, Fast Back, and Karmann Ghia
8349B-12V/ZVW256369	12V Sedan, Square Back, and Karmann Ghia

The following chart is a complete listing of all heater models produced since the first heater was produced in 1959. Heater model changes have been due to improved heater design as well as changes in the automobiles.

All heaters for Sedan, Karmann Ghia, Fast Back, and Square Back are rated at 13,000 BTU/hr. with a fuel rate of .2 gallons per hour. Heaters for Station Wagons, Buses, and Trucks are rated at 20,000 BTU/hr and a fuel rate of .3 gallons per hour except for Models 8335 and 8335-12 which are rated at 13,000 BTU/hr and fuel rate of .2 gallons per hour. The fuel rate is maximum rate with burner not cycling. Average fuel consumption is 1/3 of the above rates. Generally, 6 volt heaters will draw 11 to 14 amperes of current and 12 volt heaters will draw 8-10 amperes.

In addition, various accessory kits have also been made available, from time to time, as optional items:

PART NO. 736410 - AIR DISTRIBUTION KIT
APPLICATION: Used with Model 8332 and 8334, Transporter Heater, for added air distribution in passenger section. Not recommended for ducting heat to driver.

PART NO. 736470 - DEFROSTER KIT
APPLICATION: Used with early model sedan heaters -- 735900, 8341, 8343, and 8345 only.

PART NO. 736490 - WHEEL WELL KIT
APPLICATION: Required to relocate spare tire when installing Models 8332 and 8334 in Transporter with spare tire in rear. For cars prior to 1968 only. Parts included with 8332-12V Heater.

All heaters and kits will be discussed in detail in this manual which contains all information necessary for service and parts identification. Figs. 1 through 4 show the aforementioned heater and accessory kits installed.

Model Year	S-W Heater Model	VW Part No.	Voltage
Volkswagen Automobile -- SEDAN			
1956-60	735900	None	6
	8341	None	6
	8343	ZVW256101	6
1961-62	8345	None	6
1961-66	8345-B	ZVW256102	6
	8345-C	ZVW256103	6
1967	8349B-6V	ZVW256366	6
	8345-C12	ZVW256163	12
1967-69	8349-A	ZVW256168	12
	8349B-12V	ZVW256369	12
Volkswagen Automobile -- KARMANN GHIA			
1956-60	8342	ZVW256148	6
1961-66	8346	ZVW256149	6
	8349B-6V	ZVW256366	6
1967	8346-12	ZVW256169	12
1968	8349-A	ZVW256168	12
1967-69	8349B-12V	ZVW256369	12
VW Automobile -- Fast Back & Square Back			
1962-66	8347	ZVW256301	6
	8349B-6V	ZVW256366	6
1967	8347-12	ZVW256361	12
1968	8349-A	ZVW256168	12
1967-69	8349B-12V	ZVW256369	12
Volkswagen Automobile - Station Wagons & Buses			
1956-60	736076	None	6
1956-66	8332	ZVW256201	6
	8332-6V	ZVW256266	6
	8333	ZVW256202	12
	*8334	ZVW256203	6
	8335	ZVW256204	6
1967	8332-12	ZVW256261	12
	*8334-12	ZVW256263	12
	8335-12	ZVW256264	12
1967-69	8332B-12V	ZVW256269	12
	*8334-12V	ZVW256268	12
Volkswagen Automobile - Pickup Trucks			
1956-64	8330	None	6
	8331	None	6

*Approved by Underwriters' Laboratories

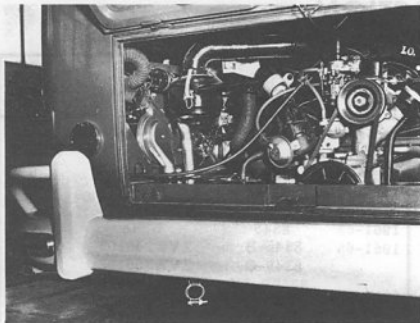


FIG. 1 - HEATER INSTALLED IN 1200CC
STATION WAGON - KIT MODEL 8332

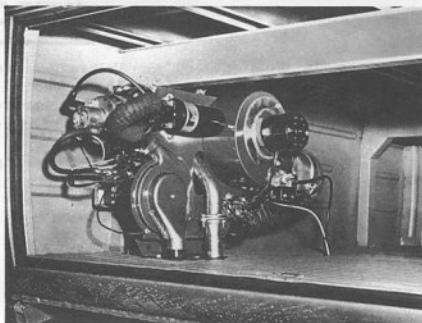


FIG. 4 - HEATER SHOWN WITHOUT COVER
SHIELD - KIT MODEL 8331

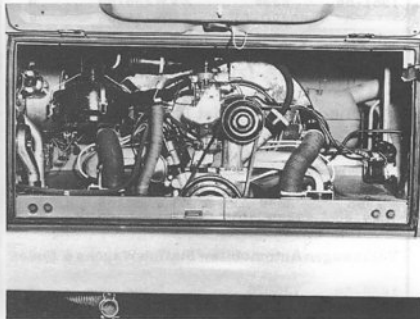


FIG. 2 - HEATER INSTALLED IN 1500 CC
TRANSPORTER PRIOR TO 1966

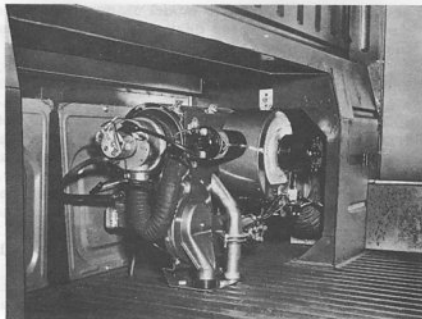


FIG. 5 - DOUBLE-CAB PICK-UP TRUCK HEATER
INSTALLATION - KIT MODEL 8330



FIG. 3 - AIR DISTRIBUTOR INSTALLED IN
STATION WAGON PRIOR TO 1969

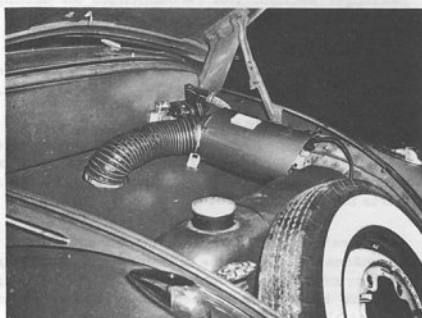


FIG. 6 - SEDAN HEATER INSTALLATION
KIT MODEL 8343

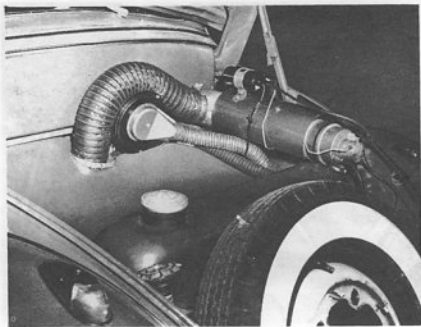


FIG. 7 - SEDAN HEATER INSTALLATION
KIT MODEL 8341

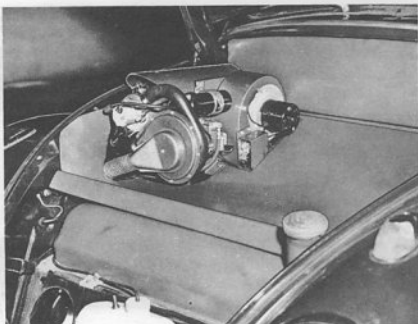


FIG. 10 - SEDAN HEATER INSTALLATION
KIT MODEL 8345-B



FIG. 8 - SEDAN HEATER INSTALLATION
KIT MODEL 8345

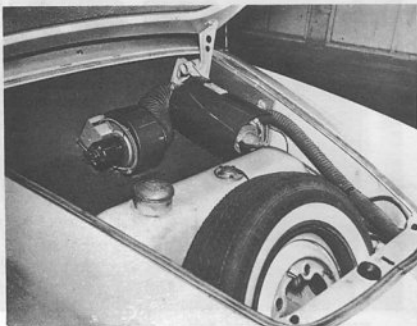


FIG. 11 - KARMANN GHIA HEATER
INSTALLATION - KIT MODEL 8342



FIG. 9 - VENT BLOWER INSTALLATION
MODELS 8341, 8343, and 8345

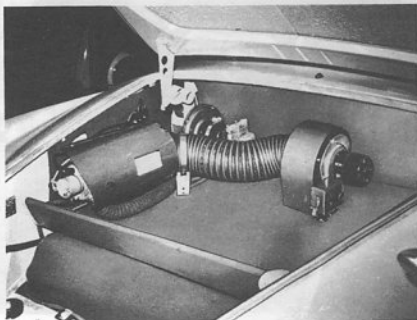


FIG. 12 - KARMANN GHIA HEATER
INSTALLATION - KIT MODEL 8346

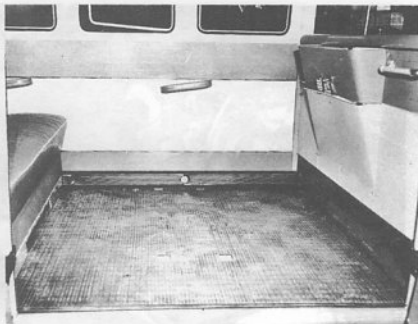


FIG. 13 - AIR DISTRIBUTOR INSTALLATION
KIT MODEL 736410



FIG. 16 - MODEL 8349A -- SEDAN

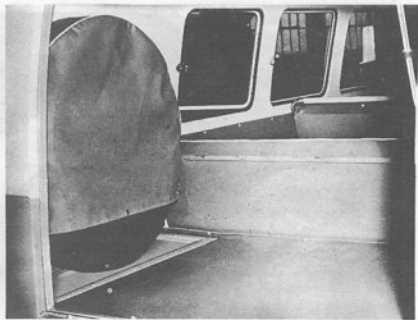


FIG. 14 - WHEEL WELL COVER KIT
736490 INSTALLED



FIG. 17 - MODEL 8349 SERIES -- MODEL 1600
TYPE III SQUARE BACK

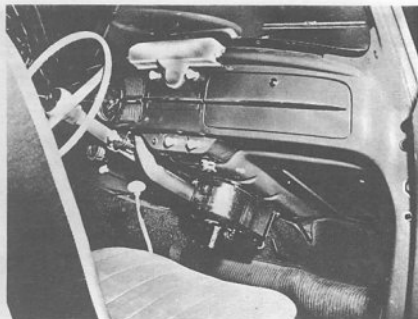


FIG. 15 - DEFROSTER KIT INSTALLED
KIT 736470

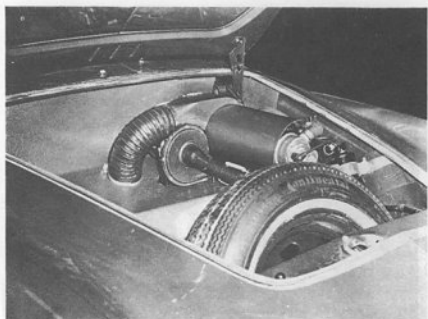


FIG. 18 - MODEL 8349A -- KARMANN GHIA



FIG. 19 - MODEL 8347 -- MODEL 1500
TYPE III FAST BACK



FIG. 22 - MODEL 8335 TRANSPORTER HEATER

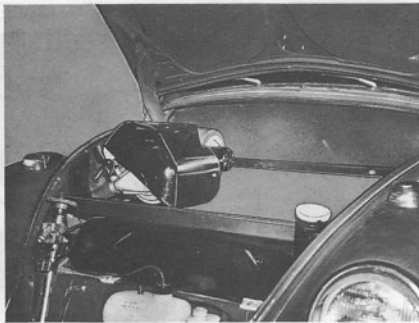


FIG. 20 - MODEL 8345C - 1961-65 SEDAN

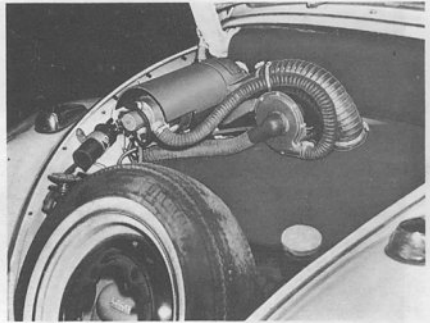


FIG. 23 - MODEL 8349 SERIES -- SEDAN 1961-67



FIG. 21 - MODEL 8332B-12V -- TRANSPORTER

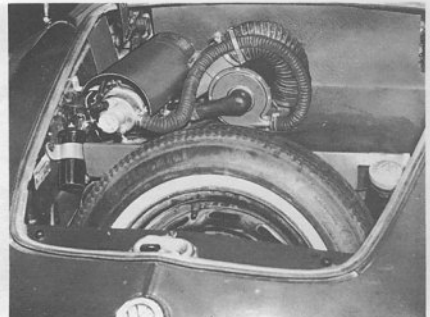


FIG. 24 - MODEL 8349 SERIES -
KARMANN GHIA 1961-67



FIG. 25 - MODEL 8349 SERIES
KARMANN GHIA 1968 and later

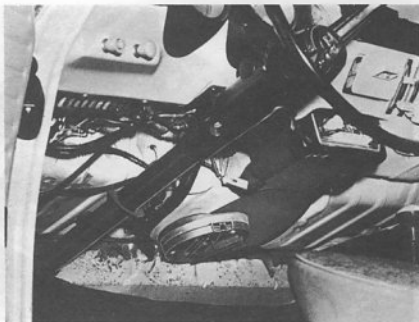


FIG. 28 - MODEL 8349 SERIES
FAST BACK AND SQUARE BACK

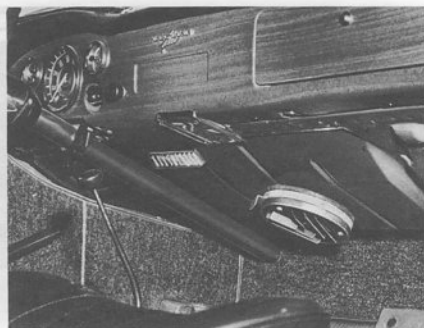


FIG. 26 - MODEL 8349 SERIES - KARMANN GHIA



FIG. 29 - MODEL 8349 SERIES
SEDAN 1961-67



FIG. 27 - MODEL 8349 SERIES
FAST BACK AND SQUARE BACK



FIG. 30 - MODEL 8349 SERIES -- SEDAN

SECTION I

GENERAL DESCRIPTION

Principles of operation are the same for all heaters. A fuel pump delivers fuel (gasoline only) to a burner assembly in which it is mixed with air supplied by a combustion air blower. This mixture is ignited by a spark plug which obtains its high voltage through a system employing a coil and set of points in much the same manner as that in a car's ignition system. The ignited mixture creates hot gases which circulate through the passages of a heat exchanger and heat the exchanger walls before passing out the heater exhaust. (See Fig. 34) The heat from the exchanger is then absorbed by fresh air which is forced across the exchanger by a separate ventilating air blower. This hot fresh air is then ducted into the car.

A thermostat is provided to interrupt fuel and ignition, thereby stopping combustion within the heater at a given temperature determined by the thermostat setting which is controlled by the user in response to his heating requirements.

A safety device known as an overheat switch is provided for the purpose of interrupting heater operation in the event the heater exchanger temperature becomes higher than a predetermined safe maximum. Additional safety controls such as a flame detector switch and a fuel safety valve are used with heaters bearing the approval of Underwriter's Laboratories.

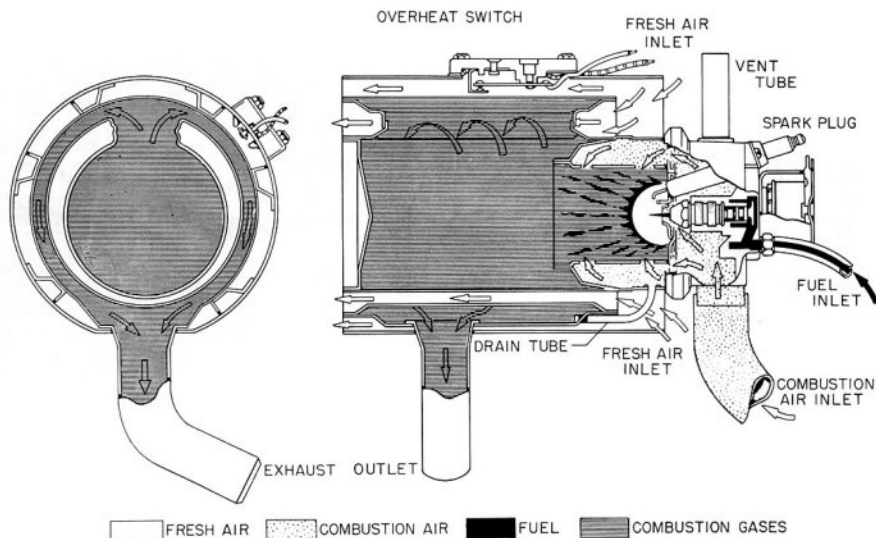


FIGURE 34 -- FLOW SYSTEM

SECTION II

HEATER COMPONENTS

1. Heat Exchanger and Burner Assembly

All exchanger and burner assemblies (Fig. 34) are functionally the same; the difference lies in physical characteristics governed by the application.

The heat exchanger is of all-welded stainless steel construction and is designed for maximum heat transfer.

The burner assembly (Fig. 34) which is secured to the exchanger by a clamp, consists of a casting into which is assembled a solenoid-operated on-off fuel valve, fuel nozzle, solenoid coil, mixer assembly, spark plug, and other components necessary for efficient burner operation.

The spring-loaded fuel valve is controlled by the solenoid coil which, in turn, is controlled by the heater switch, thermostat, and overheat switch depending upon the circumstances. (See wiring diagrams.) When the heater switch is on and the thermostat is calling for heat, the fuel solenoid coil is energized through the thermostat and overheat switch, and the resultant magnetic field lifts the spring-loaded valve from the valve seat. This allows fuel to flow to the nozzle which introduces fuel into the mixer assembly in a fixed conical spray.

Air to mix with the fuel is delivered by the combustion air blower which will be discussed later. In

order to enter the mixer, the combustion air must pass through the louver plate of the mixer and then through the small holes in the side of the mixer. The louvers and holes are of a predetermined size to admit the correct quantity of air and should not be altered without specific instructions.

The fuel-air mixture is ignited by a spark plug having a gap of .085. The plug has only one electrode and the ground electrode is welded to the mixer assembly.

2. Combustion Air Blower Assembly

The combustion air blower (Figs. 35 and 81) provides the correct amount of air to mix with the fuel to maintain a balanced fuel-air ratio. A 1-1/4 inch diameter duct is used to deliver combustion air to the burner assembly.

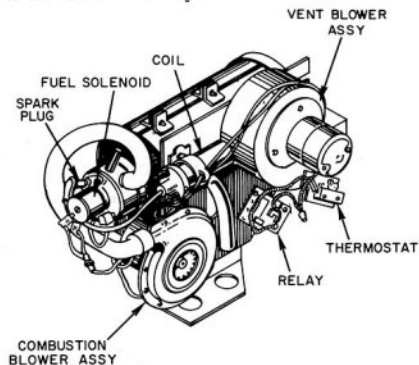


FIG. 35-SKETCH OF TRANSPORTER HEATER.

3. Ventilating Air Blower Assembly

The ventilating air blower (Figs. 9 and 15) is required for the purpose of supplying air across the heat exchanger to remove heat resulting from com-

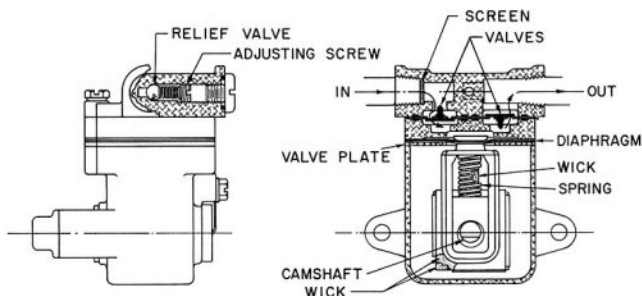


FIGURE 36A - HEATER FUEL PUMP SECTIONAL VIEW.

busation within the exchanger. This heated air is then delivered to the space to be heated.

4. Heater Fuel Pump

Each heater is equipped with a fuel pump which is driven by the combustion air motor. This is accomplished by a coupling network consisting of a metal connector on the extended shafts of the motor and pump with a rubber coupling between the connectors. The fuel pump, which is designed to deliver fuel at a pressure of 10 to 13 PSI, is a spring-loaded diaphragm type with fixed internal pressure regulation. (See Figure 36A). The fuel pump has a built-in bypass that passes excessive fuel back to the vehicle fuel system. The main spring of the fuel pump acts as a positive arm that has a pressure potential of 20-25 psig. A spring loaded ball located in the bypass is adjusted so that the fuel pump outlet pressure has a setting of 10-13 psig. All excess fuel (fuel not needed for combustion) and all vapors created by the systems or put into the fuel system are also passed through the bypass. This assures that the burner receives raw fuel for efficient combustion. Adjustment in the field is not recommended.

5. Ignition Coil, Breaker Points and Cam

These components, in combination with the spark plug described in Para. 1, result in an ignition system very similar to that used in an automobile. The coil resembles a standard automotive coil and supplies the high voltage required for the spark plug. The breaker points assembly consists of a set of points and a condenser installed on a base assembly (Fig. 81). The assembly is installed on the fuel pump housing. A two-lobed cam which is threaded (left-hand threads) on the extended shaft of the fuel pump rotates with the shaft and actuates the points thereby producing the necessary interruption of current flow in the primary winding of the ignition coil. The breaker points gap is .018.

6. Thermostat

The thermostat contains a bimetal coil which is affected by temperature changes and which controls a microswitch through a cam and adjustable linkage.

(See Fig. 36B). The thermostat, acting in response to the temperature of the air passing across the bimetal coil, cycles the fuel and ignition circuits "on" and "off" as required. The cycling temperature (70°F - 190°F) is dependent upon the positioning of the thermostat control linkage which is controlled by a Bowden cable manipulated by the user. The thermostat does not cycle the two blowers; they

operates as long as the heater switch is on (See wiring diagrams.)

7. Overheat Switch

The overheat switch is connected electrically in series with the fuel solenoid coil (See wiring diagrams) and will cycle the fuel if the air temperature at the location of the overheat switch is higher than a predetermined safe maximum. The switch (Fig. 34) contains a bimetal blade which will have enough

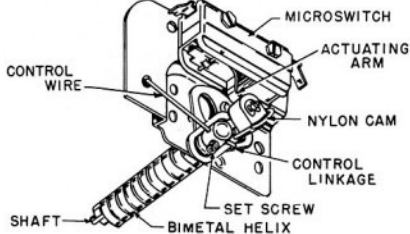


FIG. 36B - HEATER THERMOSTAT

deflection at a given temperature to open a set of contacts thereby breaking the circuit to the fuel solenoid coil. As the air cools due to loss of combustion, the switch will automatically reset and the heater will cycle on the overheat switch until the cause of malfunction is corrected.

8. Heater Relay

The relay (Fig. 35) is used only on transporter type heaters for the purpose of eliminating excessive voltage drop in the hot lead of the heater by providing a means of connecting to a power point nearer the heater. Therefore, the heater switch in this instance is used only to energize the coil of the relay and close the relay contacts to complete the circuit to the heater. (See wiring diagrams, Figs. 43, 44 & 45.)

9. Flame Detector Switch & Fuel Safety Valve

The flame detector switch and fuel safety valve (Figs. 37 & 38) are used with Model 8334 which is approved by Underwriters' Laboratories. These two parts prevent fuel from entering the burner if an ignition failure occurs.

The safety valve consists of a solenoid and a casting which houses a spring-loaded diaphragm. The solenoid is controlled by the flame detector switch which consists of a tube and bracket assembly into which is assembled a quartz rod, a microswitch, and a leaf spring which is installed between the tip of the rod and the button of the switch. The flame detector switch is installed so that the tube with the quartz rod is inserted into the flame inside the exchanger. When the tube of the flame detector switch is cold, the tube is contracted and forces the rod against the spring which, in turn, depresses the microswitch button which opens the switch so no current flows to the safety valve solenoid. When hot, the tube expands and the quartz rod, which is not affected by temperature, is forced by the spring to

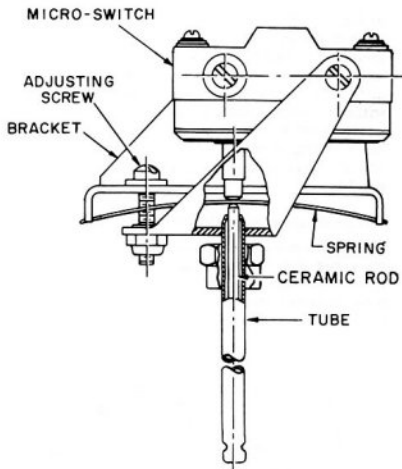


FIG. 37 FLAME DETECTOR SWITCH

follow the tube. This action releases the switch button, the switch closes, and the circuit is completed to the solenoid of the safety valve.

The initial supply of fuel for starting is supplied by the safety valve which accumulates fuel in a reservoir section during previous operation of the heater. The spring-loaded diaphragm forces the fuel

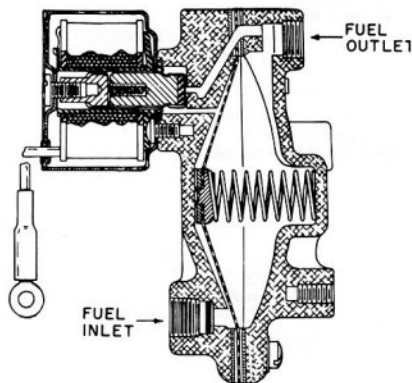


FIG. 38 - SECTIONAL VIEW OF FUEL SAFETY VALVE

out of the valve housing and into the burner. If the heater fails to ignite, only the fuel in the reservoir section enters the burner because the flame detector switch did not transfer to energize the solenoid of the safety valve.

When a flame detector switch and safety valve are used with a heater, a safety valve reset switch is also included. After first installing a heater, or perhaps after maintenance, it is necessary to depress the spring-loaded reset switch (with heater switch

on) and release it approximately 10 seconds after the heater ignites. This is required for priming the safety valve. The valve is self-priming during normal operation.

SECTION III SERVICE AND REPAIR

This section consists of a Trouble Shooting Chart and other information to assist the service man in locating the cause of malfunction in a defective heating system. Basically, three things are required for correct heater operation. These are: FUEL, AIR, and IGNITION. The most obvious causes of

malfunction should be investigated before disassembling major assemblies. Before conceding that the heater is defective, make certain the customer understands how to operate the heater. Then operate the heater to determine if the complaint is justified before proceeding with inspection.

TROUBLE SHOOTING CHART							
POSSIBLE CAUSE	COMPLAINT						
	Heater Inoperative; Combustion Air Blower Inoperative	Heater Inoperative; Combustion Air; Blower Operates	Heater Operates; No Warm Air Delivered	Popping or Backfiring When Heater Cycles	Excessive Exhaust Smoke	Gasoline and/or Exhaust Odors in Car	Intermittent Operation; Heat too Low
Burned out fuse	X						
Loose or defective wiring	X	X		X	X	X	X
Incorrect wiring	X	X	X	X	X	X	X
Low voltage		X		X	X	X	
Kinked or restricted fuel lines		X		X			X
Defective fuel pump		X		X	X		X
Broken pump coupling		X		X			X
Defective pump check valves		X		X			X
Air lock in fuel line		X					X
Open fuel solenoid coil		X					
Fuel valve sticking on seat		X					
Clogged nozzle		X					X
Defective overheat switch		X					X
Defective thermostat		X					X
Leaking fuel valve				X	X		
Incorrect spray from nozzle		X					
High fuel pressure				X			
Incorrect fuel nozzle					X	X	
Leaking fuel lines					X	X	
Leak at coil cup						X	X
Leak between nozzle and casting				X			
Leaking heat exchanger						X	
Loose burner clamp						X	X
Slow combustion air motor				X	X	X	
Combustion air motor not grounded	X			X	X	X	
Damaged or disconnected combustion air duct		X		X	X	X	
Restricted exhaust		X		X	X	X	
Pitted breaker points		X		X			
Poor condenser solder joint		X		X			
Worn points cam		X		X			
Incorrect points gap		X		X			
Damaged spark plug		X		X			
Incorrect spark gap		X		X			
Defective ignition coil		X		X			
Open flame detector switch		X					
Open safety valve coil		X					
Defective relay	X			X	X	X	
Defective control switch	X			X			
Incorrect control cable installation							
Damaged or restricted air duct			X				X
Ventilating air motor defective			X				X
Incorrect installation		X	X			X	X
Incorrect customer operation						X	X
Leak at vehicle tank or engine						X	

1. Heat Exchanger and Burner Assembly

The heat exchanger should last for several years. However, if a complaint of exhaust fumes arises and inspection of the exchanger reveals leakage, it should be replaced. Leaks will be indicated by a deposit of red, yellow, and orange deposits surrounding the leak or a hole caused by a "burn-through".

The burner assembly is not a service part and should be repaired by replacing the defective parts only. If the burner assembly is removed for service, a thorough inspection prior to disassembly can sometimes reveal the cause of malfunction. The nozzle and inside of the mixer will normally be coated with a medium layer of black carbon, and the nozzle should have a small gray opening at the orifice. The outer end of the mixer will usually be burned to a gray or reddish color and some scaling or loose particles may be present. These should not be considered as defects. Indications of improper operation are uneven build-up of black, sooty carbon or an excessively burned or eroded spot on the mixer. All air holes in the mixer must be open to allow entry of combustion air to mix with the fuel. Also check for evidence of fuel leakage around the fuel inlet fitting and between the solenoid coil cup and burner casting. In a complaint of popping or backfiring, check the fuel valve for leakage by applying fuel (under pressure) to the burner with the solenoid coil de-energized. If the valve does not seat properly on the valve seat because of dirt or other foreign matter or a missing valve spring, fuel will enter the burner at all times regardless of thermostat setting. This condition is usually indicated by excessive black smoke from the exhaust when the heater is first turned on with gradual clearing of the smoke as the heater continues to operate. However, when the heater cycles off and then on again, a pop or backfire can and usually does occur. In this instance, Part No. 736009, Burner Service Kit, which contains gaskets, valve, valve seat, and other parts assembled in the burner casting, should be used after disassembly of the burner.

A leak between the nozzle and burner casting can also result in improper combustion and occasional popping. First determine if a leak is present at this point by holding your thumb over the nozzle orifice with the solenoid coil energized and fuel applied to the burner under pressure. If a leak is present, check to see if the nozzle is tight. If it is tight, remove it and check the nozzle seating surface of the burner casting for scoring or unevenness. If the surface is damaged, the burner casting should be replaced.

The fuel solenoid coil seldom fails. The coil can be checked by holding a screwdriver blade near the coil cover screw while energizing and de-energizing the coil. A good coil will attract the blade when the coil is energized. A magnetized screwdriver should not be used for this test. Another quick method of checking is by listening for a click as the coil is energized. The click is the valve being attracted to the bottom of the coil cup.

Many fuel nozzles are replaced in a routine manner when the real difficulty lies elsewhere. The nozzle

should emit an even conical-shaped spray and should not be directed to one side. The nozzle may be checked by supplying fuel under pressure to the burner with the solenoid coil energized and the spark plug cable and combustion air duct disconnected. It may be necessary to supply a separate length of fuel line in order to prevent fuel from being sprayed on the car or the test can be conducted at a bench. A slight dribbling of fuel may be noted when the solenoid coil is de-energized. This is permissible; however, continuous flow indicates a leaking valve which should be corrected. Never attempt to remove the screen in the nozzle nor clean the nozzle orifice with a sharp instrument. The best method of cleaning the face of the nozzle is by rubbing your thumb over the face while fuel is being emitted under pressure.

The spark plug is another item which is replaced quite often without cause. The plug housing protruding into the mixer will normally be coated with a medium layer of carbon. As previously explained, the ground electrode is welded to the mixer. Therefore, adjustment of the .085 gap is made by moving only the ground with the spark plug electrode located in the center of the plug housing. It is very important that the ground electrode be positioned correctly with respect to the nozzle orifice and Service Tool No. ST-890330 should be used. The ground electrode should lie flat against the shoulder of the gauge (Fig. 39). Incorrect gap or location of the ground electrode can be the cause of delayed ignition, non-ignition, or can result in formation of carbon across the gap. Therefore, proper adjustment is extremely important. Replacement of the plug should be required only when it is broken or the electrode is burned excessively. Before reinstalling the burner assembly, check for an arc at the gap. During the test, the fuel solenoid leads should be disconnected, the burner assembly grounded, the heater switch on, and the thermostat on high. Spark Plug Kit, Part No. 736008, contains the plug and gasket and is used for service.

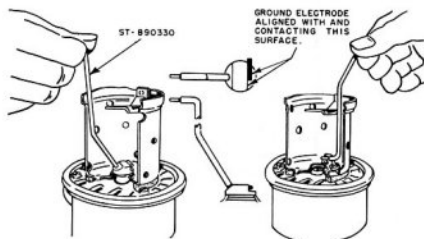


FIG. 39 - CHECK PLUG ALIGNMENT AND GAP

2. Combustion Air Blower Assembly

Combustion air is taken from outside the vehicle. Therefore, in an instance of excessive exhaust smoke with insufficient combustion air suspected, inspect all combustion air ducts for restrictions caused by kinking, obstructions, or damage. Motor speed should be approximately 4000 RPM. Check to see that the motor is grounded and that sufficient voltage is

available at the motor. Minimum voltage at the motor should be approximately 5.5 volts for 6-volt systems and 11.0 volts for 12-volt systems. If voltage is lower than this and heater is unsatisfactory, check all wiring connections, vehicle battery, vehicle charging circuit, and heater relay as outlined in Paragraph 8 of this section.

3. Ventilating Air Blower Assembly

A complaint of insufficient or no heat with the heater operating can be due to a defective ventilating air motor, wiring, or restricted or loose duct.

4. Fuel Pump

Fuel pump pressure should be 5.5 to 9.5 PSI with the heater operating. A slight rise in pressure will be noted when the heater cycles off. Since the fuel pump is driven by the combustion air motor, make sure the motor is operating during a pressure check. If the coupling or one of the metal connectors which serve as the coupling network between the shafts of the pump and motor is broken. Part No. 735405, Pump Coupling, should be used for service. The package contains two connectors, a coupling and two flat washers. It is very important that the washers be installed behind the connectors to prevent the connectors from overriding the threads on the shafts. If there is no pressure or pressure is intermittent, it is very possible that the pump check valves are defective. The valves are installed in a brass plate beneath the pump top casting and are serviced by Part No. 735736, Fuel Pump Valve Kit, containing the valves installed in the plate and four gaskets. If the pump is defective for other reasons, it should be replaced. When installing new check valves, refer to Fig. so that the valves will be installed correctly with respect to fuel flow as indicated on the pump casting marked "IN" and "OUT". The flap of the check valve should be down on the inlet side and up on the outlet side.

Whenever the top casting of the pump is removed for pump service, always make certain that the pump shaft is on the down portion of the stroke before reinstalling the top casting. This is an added precaution against high fuel pump pressure. A fuel pump with excessive pressure or binding shaft can sometimes be corrected by removing the top casting of the pump to expose the diaphragm, pressing down vigorously with the thumb (with the pump shaft on the down portion of the stroke), and reassembling without rotating pump shaft.

The pump shaft must rotate freely as a binding pump will overload the combustion air motor and cause excessive exhaust smoke due to lack of combustion air. A pump that binds, particularly in only one part of the rotation, usually indicates an improperly seated diaphragm.

5. Ignition Coil, Breaker Points, and Cam

The ignition coil resembles a standard automotive coil; however, if replacement is required, only the recommended service part should be used.

The breaker points are serviced by replacing the entire base assembly which includes the points and condenser. The adjustment of .018 is obtained by an

adjusting screw which has the stationary contact on the end. When the proper gap is reached, solder the adjusting screw in place making certain that it is secure and that the condenser lead is also soldered. Do not use acid core solder since the acid will cause corrosion. Use rosin core solder only. If the adjusting screw is not soldered or a cold solder joint exists at the condenser and screw, backfiring will usually occur because of intermittent spark.

The two lobed cam has left hand threads and should be replaced if wear is noted. When adjusting points, rotate the cam so that a lobe of the cam raises the movable contact arm and adjust for .018 gap. Then rotate the cam to the other lobe and check for a gap of .012 to .021. With .018 on one lobe, .012 to .021 is permissible on the other lobe.

The coil, points, and cam can be functionally checked as follows. Remove the spark plug cable from the heater spark plug and insert a standard automotive plug gapped to approximately .085. Disconnect the fuel solenoid lead to prevent fuel from entering the burner, ground the automotive plug, turn the heater switch on, and place the thermostat on high heat. If all ignition parts are good, a steady spark will be noted. No spark indicates trouble in the coil, points, cam, wiring, or thermostat.

6. Thermostat

The thermostat will very seldom require service, and it is serviced by replacing the entire thermostat rather than just the defective part because of possible inaccuracy of field adjustment.

Most complaints traced to the thermostat are the result of improper control cable installation at the thermostat linkage. With the heater control knob pushed all the way in, the thermostat linkage should travel to its full counter-clockwise position. With the heater control out as far as it will go, the linkage should have full clockwise travel. This results in use of the full 70-190 degree temperature range. A set screw secures the control cable to the linkage.

To determine if the thermostat is defective proceed as follows. With heater switch on and heater control pulled out to its extreme position, connect a test light between the cold terminal of thermostat and ground. If the test light glows, the thermostat switch is closed which indicates that the thermostat is completing the circuit as it should. If the light does not glow and wiring connections are good, the thermostat should be replaced. If a shorted thermostat is suspected, depress the metal actuating arm of the thermostat with the test light as above and heater switch on. If the light continues to glow, the thermostat is shorted and should be replaced.

7. Overheat Switch

The over heat switch should have continuity through it during normal heater operation. If a defective overheat switch is suspected, it can be checked out with an ohmmeter, buzzer, or test light after referring to the wiring diagram. A defective overheat switch should be replaced and no field adjustment is recommended.

8. Heater Relay

With the heater switch on, power should be present at the "switch", "battery", and "load" terminals of the relay. This can be determined by placing a test light between ground and the terminal to be checked. Power should be present at the "battery" terminal at all times since this is connected to the hot terminal of the voltage regulator. If the test light fails to glow when placed on the "switch" terminal, the heater switch or related switch, wiring is defective. If the light glows when placed on the "battery" and "switch" terminals but does not glow on the "load" terminal, either the fuse or relay is defective and should be replaced.

If the light glows when placed on the "load" terminal but is dim, it indicates excessive voltage drop across the relay contacts or poor fuse contact. The voltage drop between the "battery" terminal and "load" terminal should not exceed .2 volt with the heater operating. Check for good wiring and fuse connections. If voltage drop is still excessive, replace the relay.

9. Flame Detector Switch and Fuel Safety Valve

As previously explained, the flame detector switch and safety valve are safety controls used with the Model 8334 for the purpose of preventing fuel flow to the burner in the event the heater does not start. If the heater does not continue to operate after starting it is possible that the microswitch of the flame detector switch is defective or the switch is out of adjustment. The switch can be checked for continuity with an ohmmer, buzzer, or a test light. Loosen the two screws holding the microswitch in place so that the button of the switch is released. Then check for continuity with an ohmmer or buzzer. If a test light

is used, turn the heater switch on and check to see if the light glows when placed between ground and each of the terminals. If the light does not glow on both terminals, the switch is defective and the entire flame detector switch assembly should be replaced. If adjustment only is required, loosen the adjusting screw (with the microswitch free in the bracket) until the switch clicks. Next turn the adjusting screw in until the switch clicks again; then turn the screw in an additional 3/4 of a turn. Hold the microswitch firmly in place and then tighten the two mounting screws. This adjustment should be made with the switch at room temperature.

If the quartz rod is broken, it should be replaced since it is the controlling part of the safety feature. The quartz rod is a service item.

The fuel safety valve can be checked the same as any solenoid operated valve for electrical continuity of the solenoid coil and fuel flow through the valve.

10. Service Tools

Three service tools are available at nominal cost to aid in servicing South Wind Heaters.

Part No. ST-890330, Spark Plug Gage, (Fig. 40) is necessary for heater service and is used not only for obtaining the correct gap of .085 but also for locating the ground electrode in the proper relationship to the fuel nozzle orifice.

Part No. ST-890322, Fuel Pressure Gage, (0-30 PSI) Fig. 41) and Part No. ST-890325, Test Light, (Fig. 42) are also available.

11. Wiring Diagram

The following wiring diagrams represent all heaters discussed in this manual and are reproduced in a manner to simplify tracing of wires and connections.

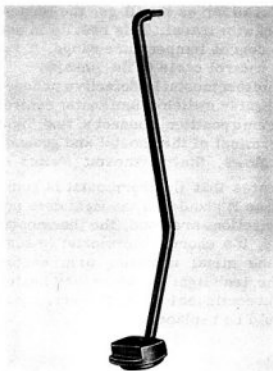


FIG. 40 - SPARK PLUG GAGE
SW PART NO. - ST-890330
VW PART NO. - ZVW 257-855



FIG. 41 - FUEL PRESSURE GAGE
SW PART NO. - ST- 890322
VW PART NO. - ZVW 257-853

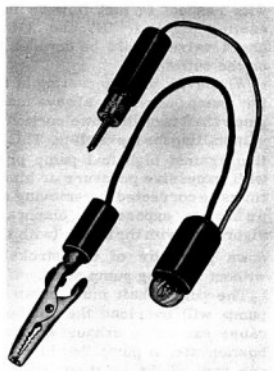


FIG. 42 - TEST LIGHT
SW PART NO. ST-890325
VW PART NO. - ZVW 257-854

WIRING DIAGRAMS

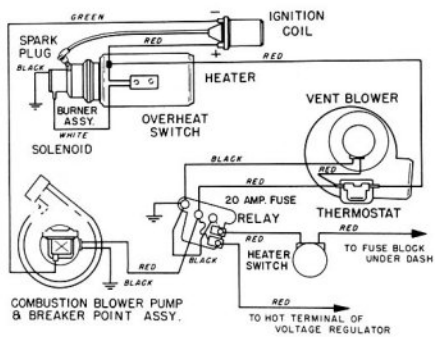


FIG. - 43 - TYPE 2 EXCEPT FOR
8334 & 8335

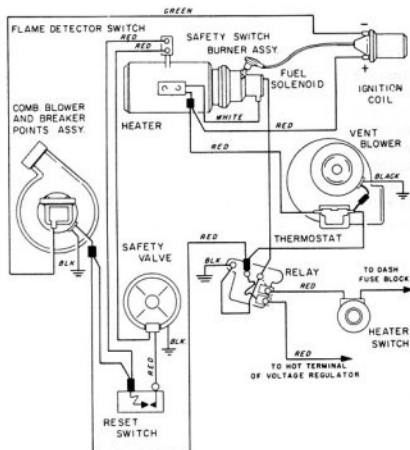


FIGURE 44 - KIT MODEL 8334


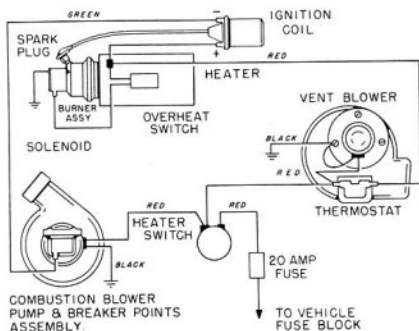


FIGURE 45 - Types 1 & 3 - and MODEL 8335

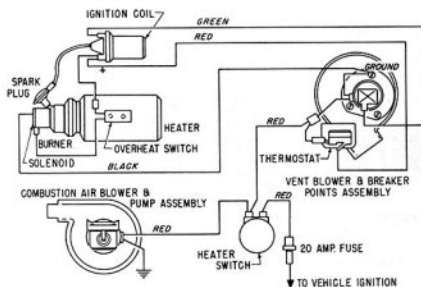

SECTION IV

PARTS CATALOG

This section contains listing of all parts, assemblies, and service tools used with heaters described in this manual. The parts list shows all parts whether they are service parts or not. Therefore, it is important that the "Remarks" column of the parts list be consulted before ordering the part since another part may be used for service. The reason for this is to minimize, as much as possible, the inventory of service parts. Some parts listed are assemblies which are not service parts and, therefore, should

be serviced by replacing the defective part only. An example is the 736190-1 Burner Assembly which is serviced by replacing only the defective part of the burner assembly. Some items are also contained in kits and the "Remarks" column will indicate which kit it is to be used. An example is 735082 Spark Plug, available only in 736008 Kit which contains the spark plug and gasket. In summary, only the parts which have a price indicated on the Service Parts List are available as service parts.

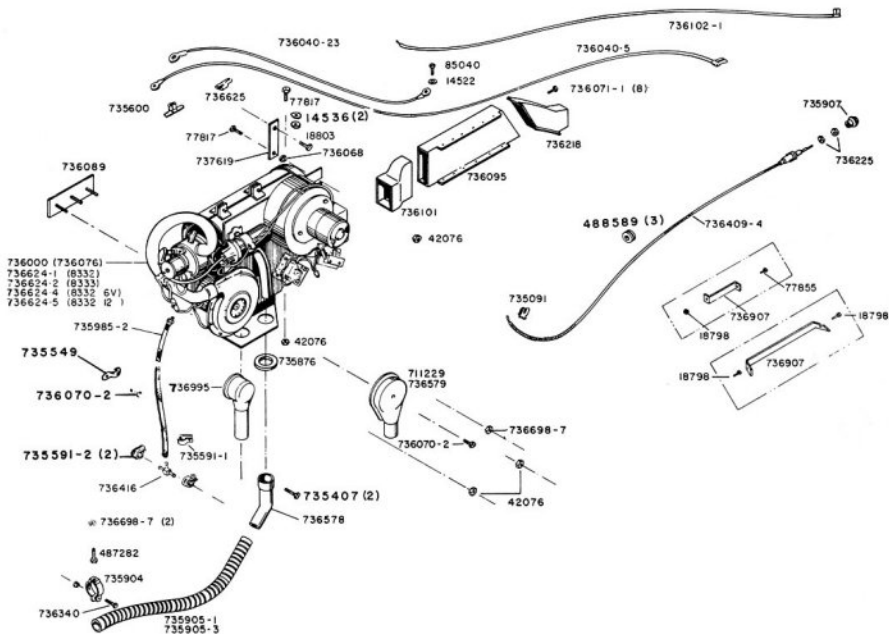


FIGURE 46 - KIT MODEL 736076, 8332, 8332-6V, 8332-12, 8333

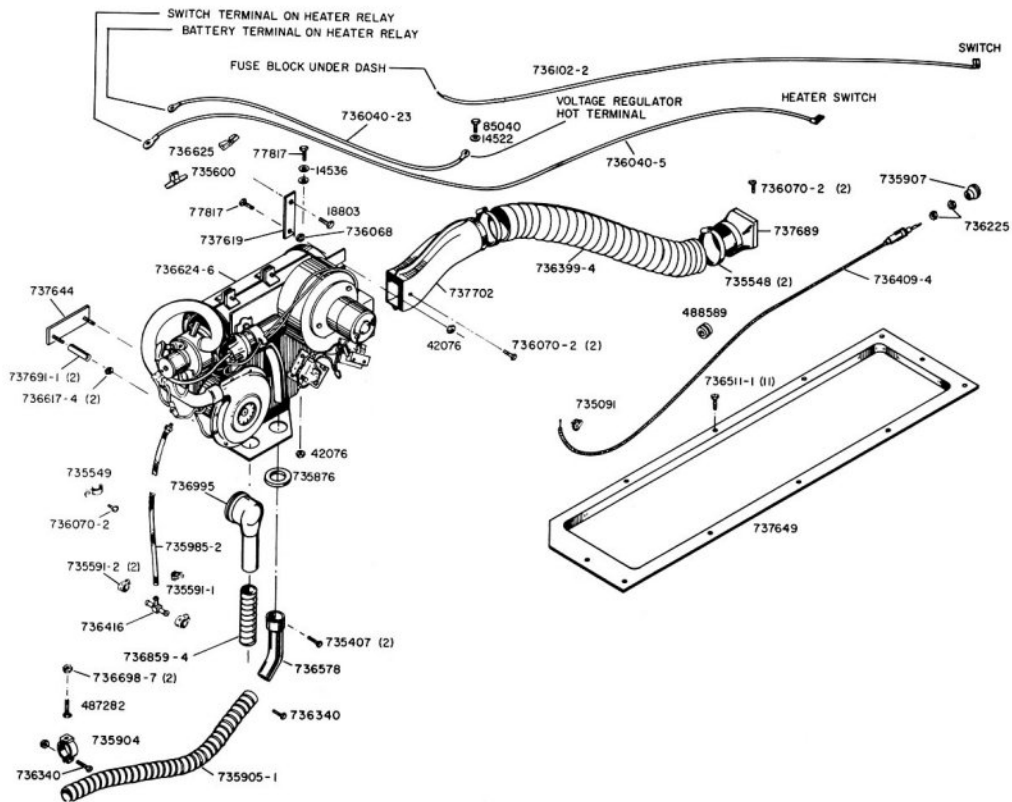
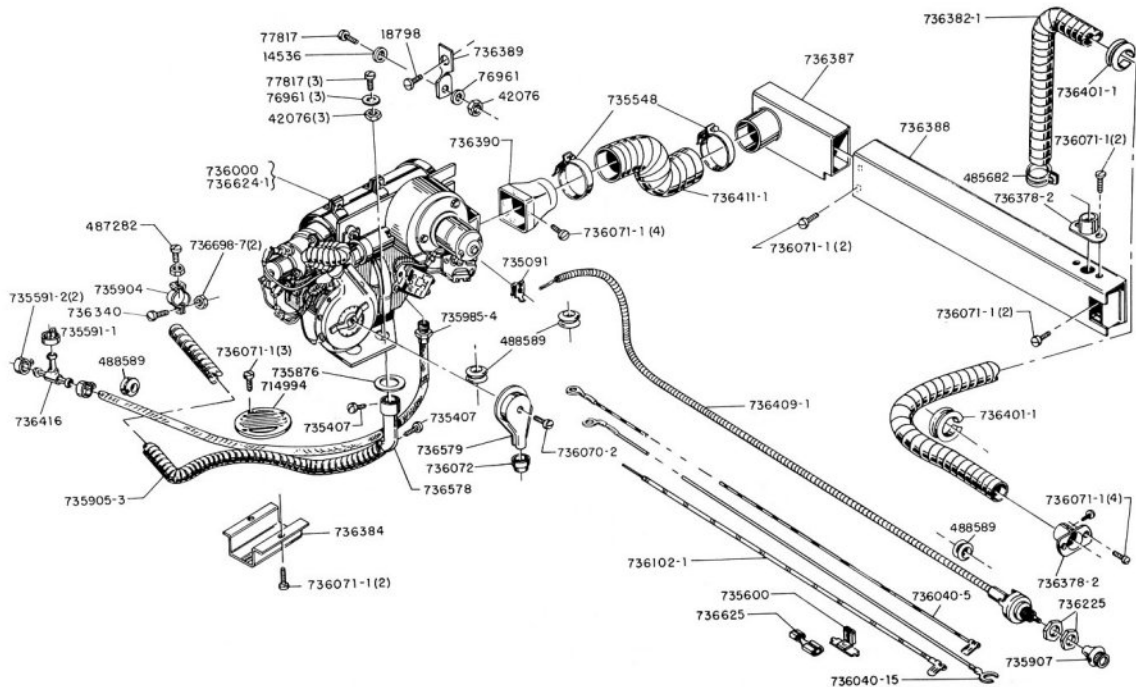


FIGURE 47 - KIT MODEL 8332B-12V

FIGURE 48 - KIT MODEL 8330
-18-



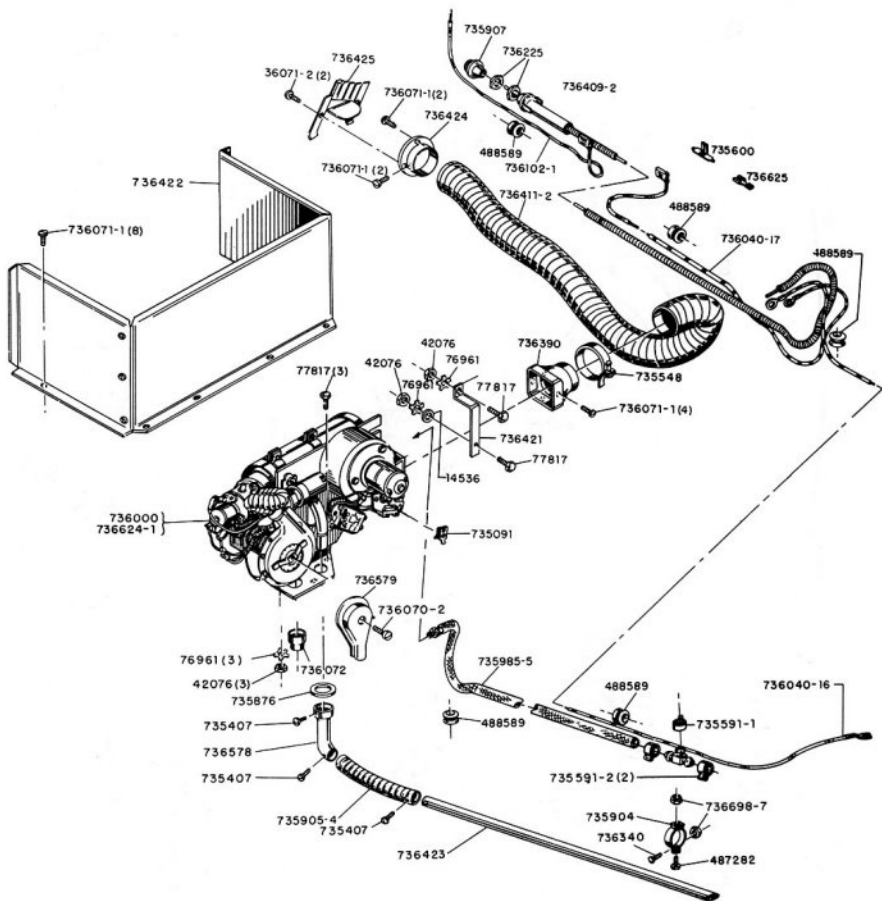
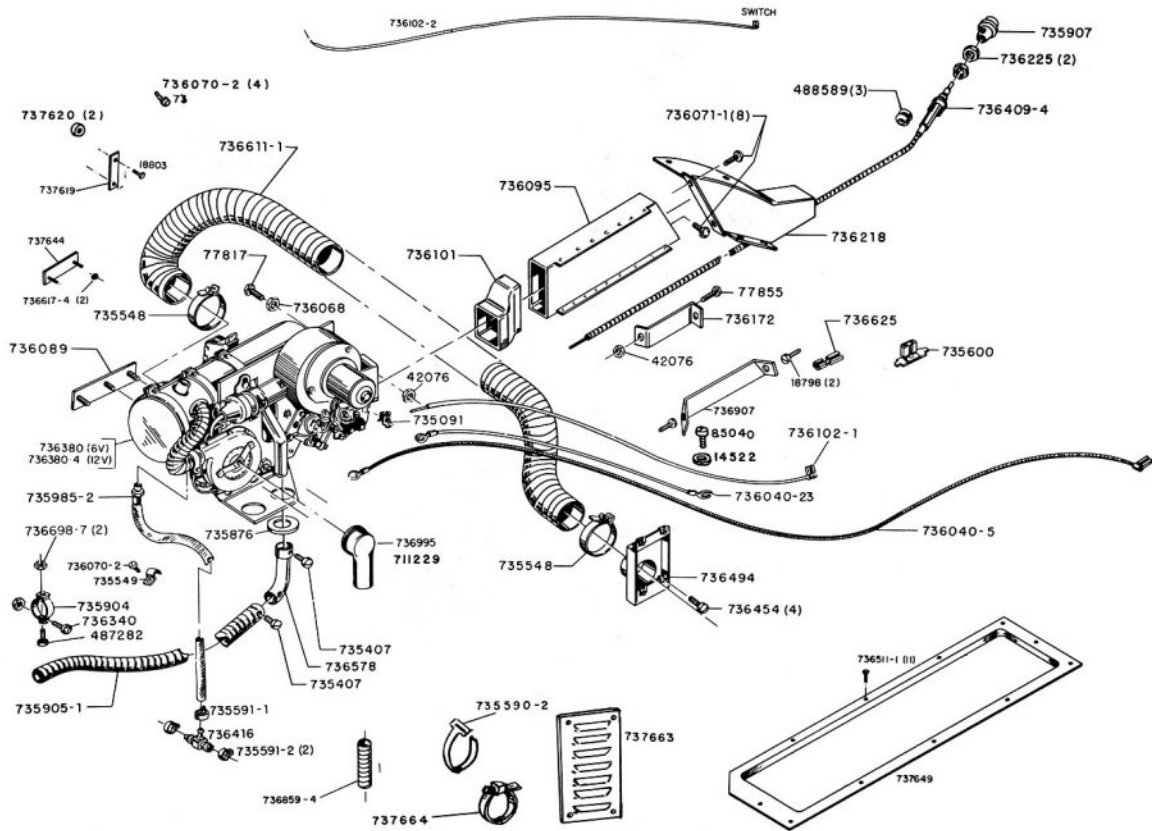


FIGURE 49 - KIT MODEL 8331

FIGURE 50 - KIT MODEL 8334, 8334-12V and 737618-737665 KITS

-20-






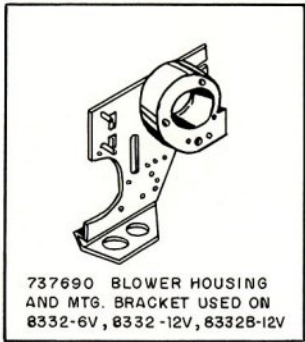


FIGURE 51 - HEATER AND BRACKET ASSEMBLY 736624-1, -2, -4, -5 & -6
USED ON KIT MODELS 8330, 8331, 8332, 8332-6V, 8332-12, and 8332-B12V

FIGURE 52 - HEATER AND BRACKET ASSEMBLY 736380 and 736380-4
 USED ON KIT MODEL 8334 and 8334-12V

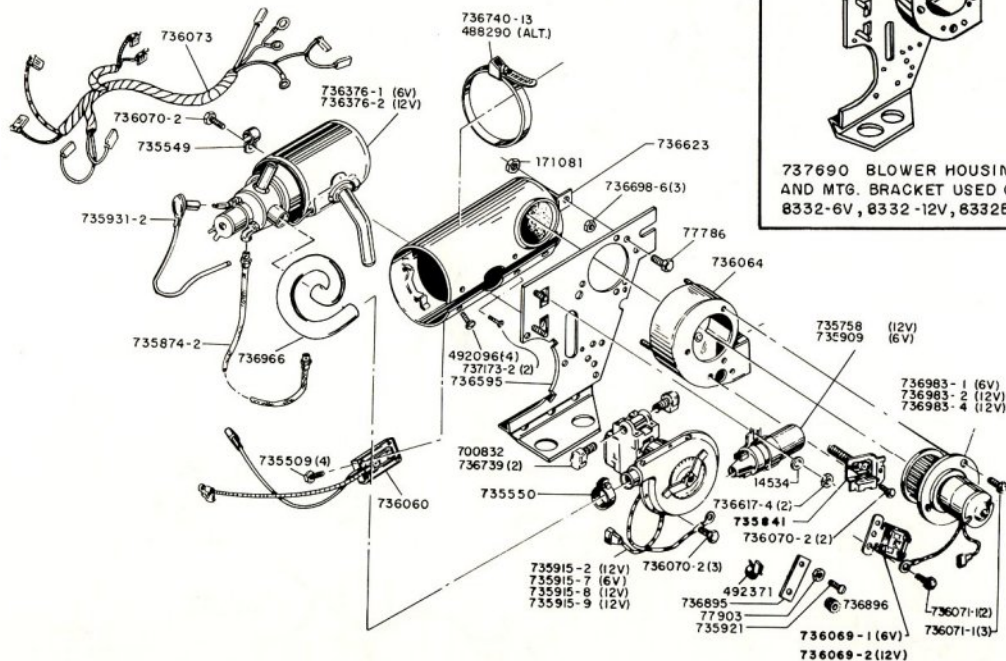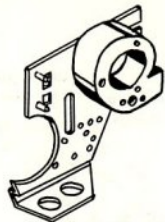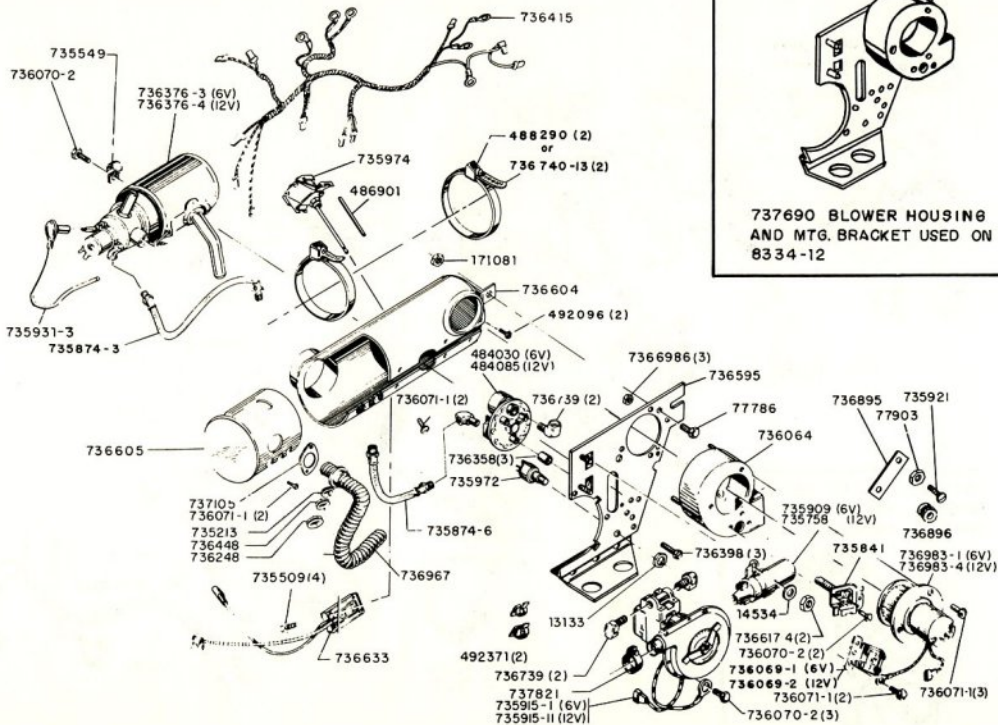

737690 BLOWER HOUSING
 AND MOUNTING BRACKET USED ON
 8334-12

FIGURE 53 - KIT MODEL 736900

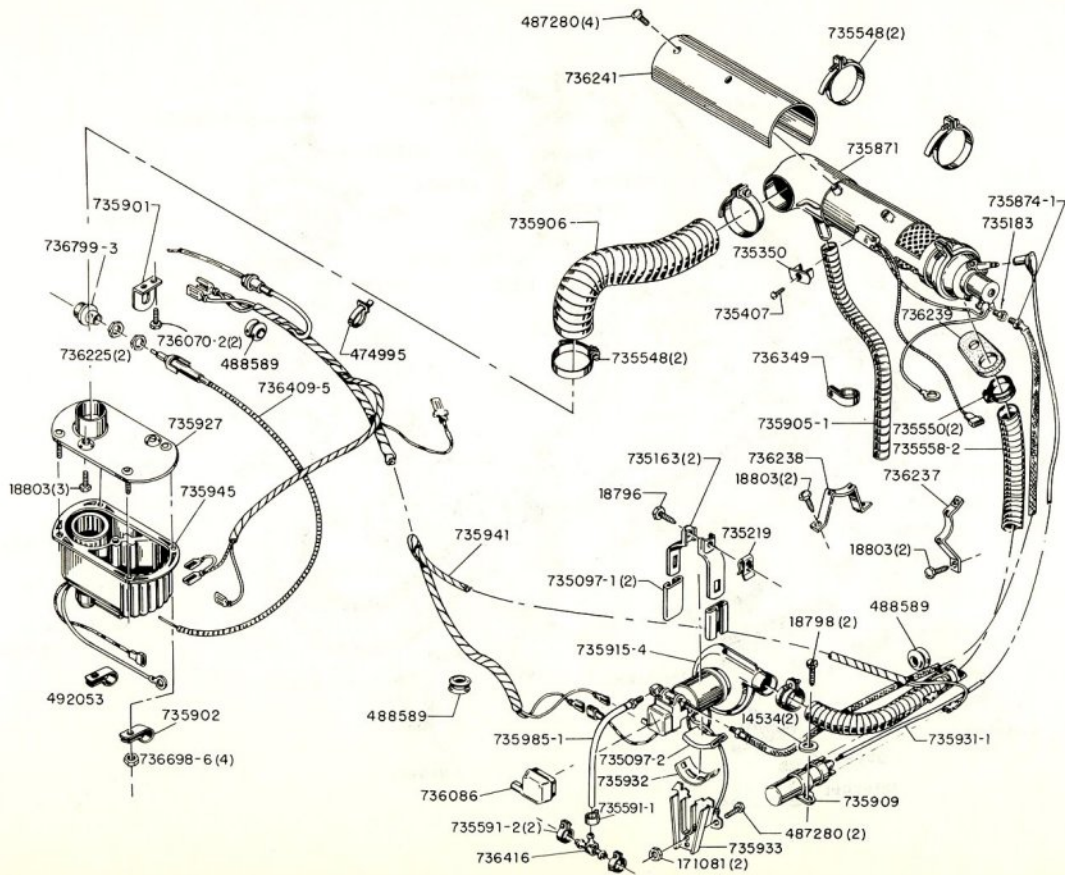
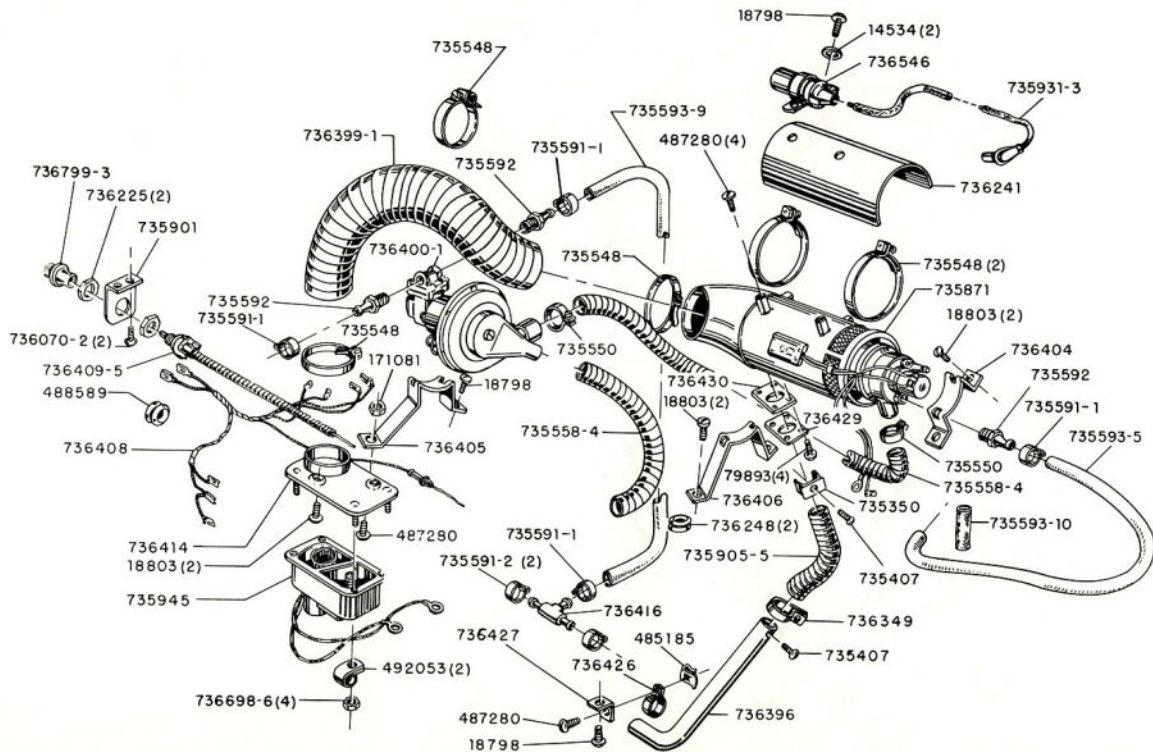


FIGURE 54 - KIT MODEL 8341
-24-



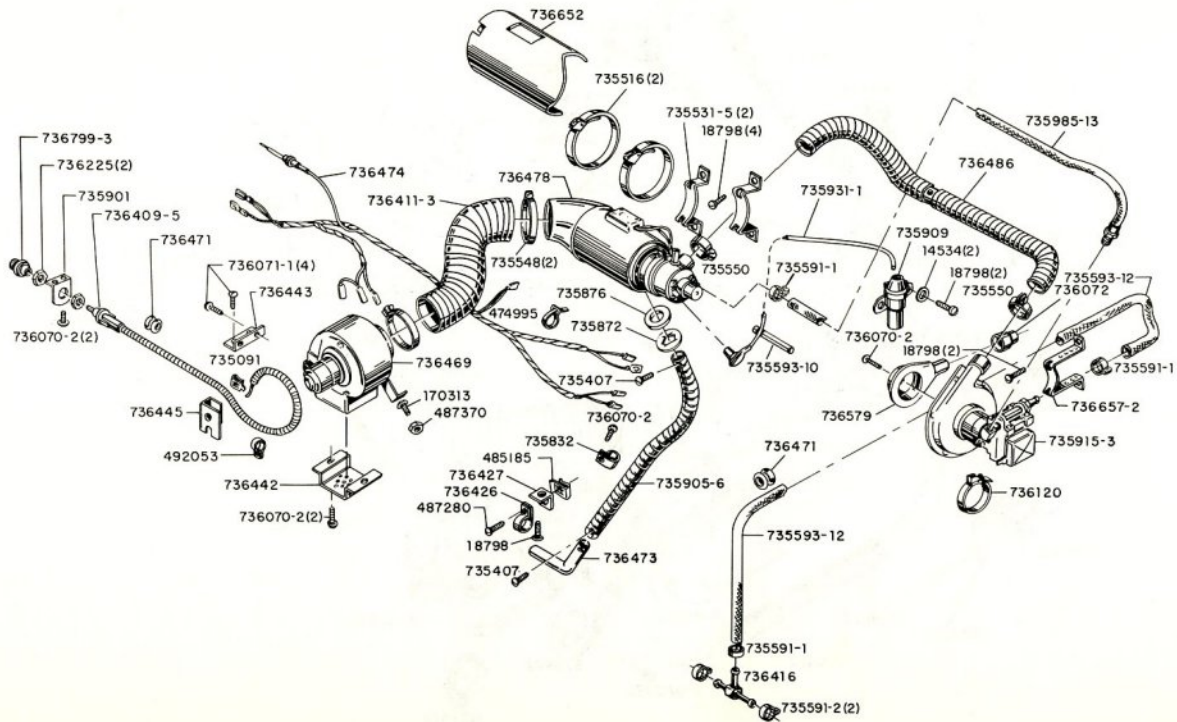


FIGURE 55 - KIT MODEL 8342

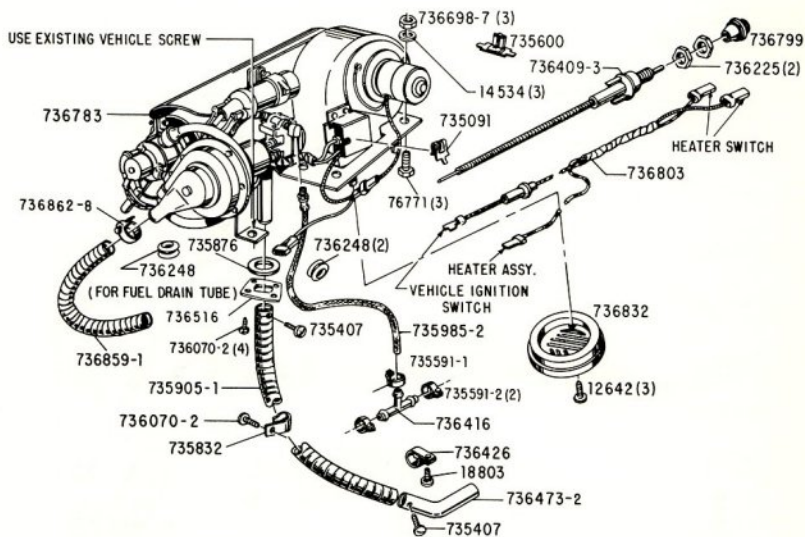


FIGURE 58 - KIT MODEL 8345-B

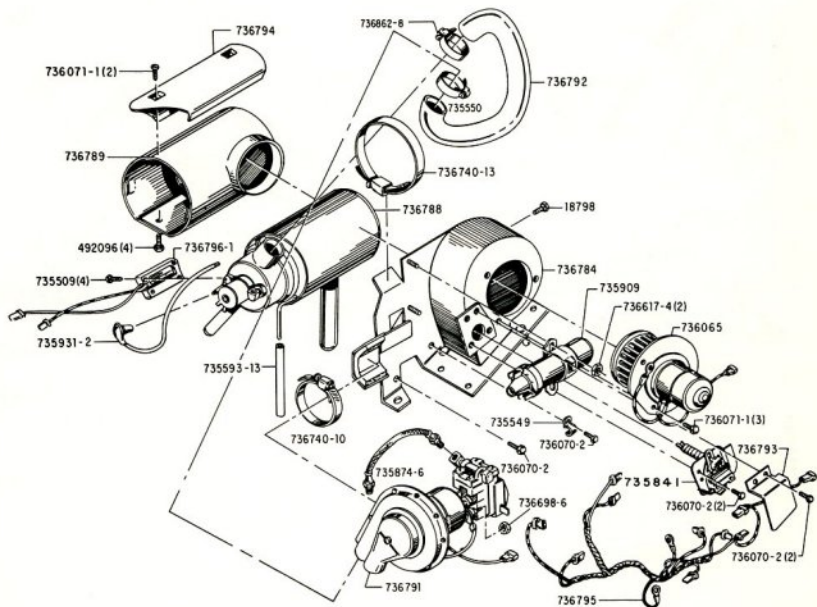


FIGURE 59 - HEATER ASSEMBLY 736783 USED ON KIT 8345-B

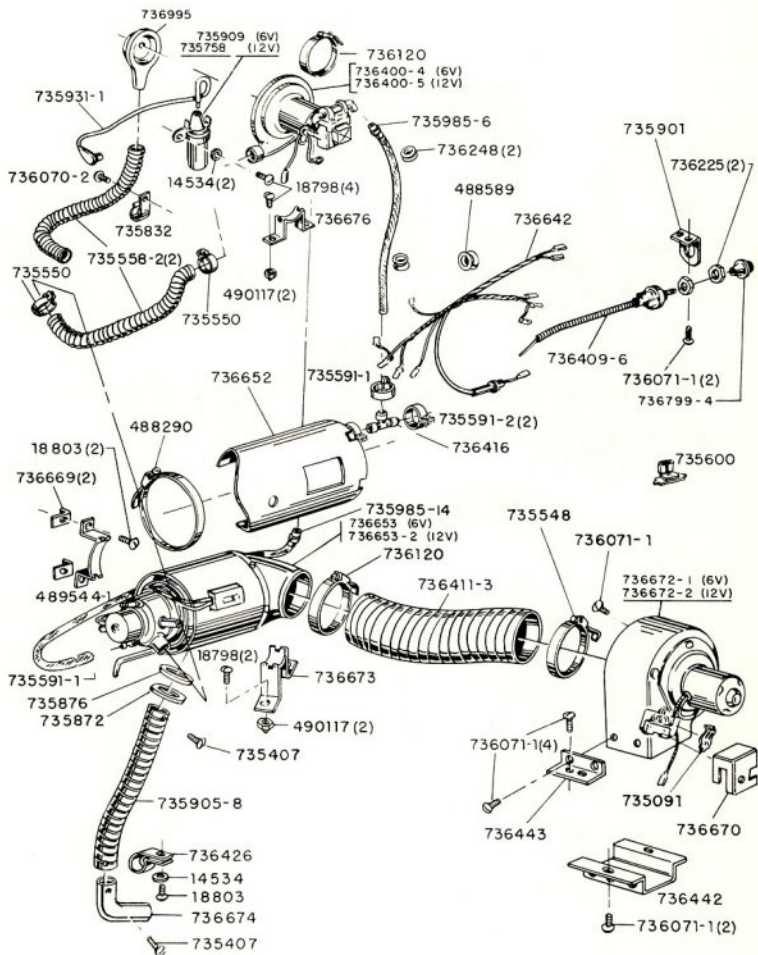


FIGURE 60 - KIT MODEL 8346 and 8346-12

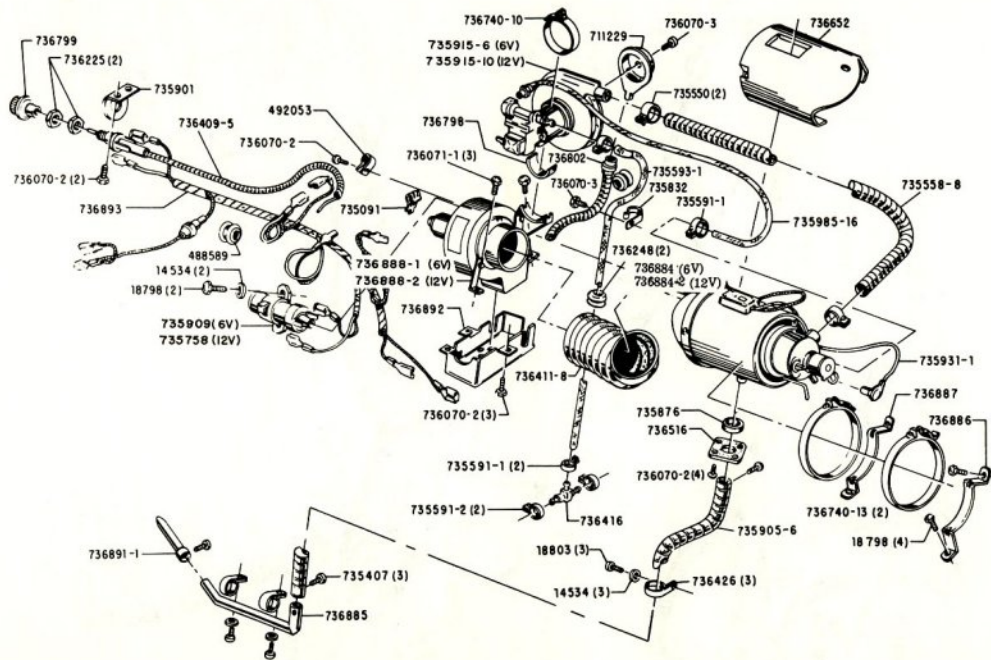


FIGURE 61 - KIT MODEL 8347 and 8347-12

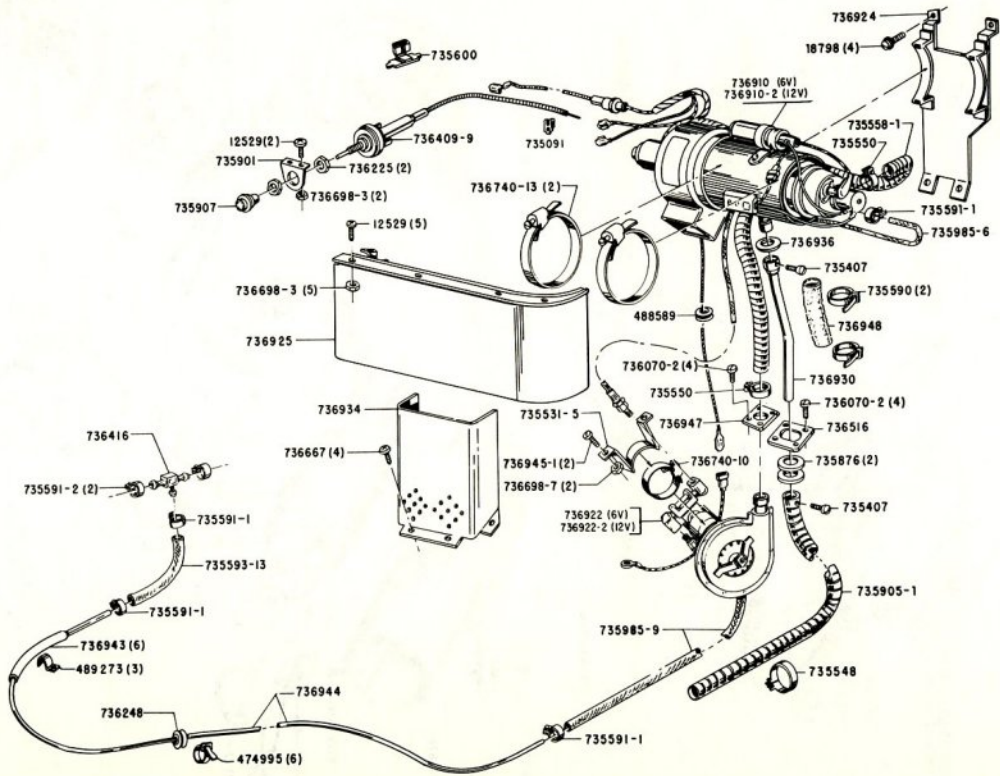


FIGURE 62 - KIT MODEL 8335 and 8335-12

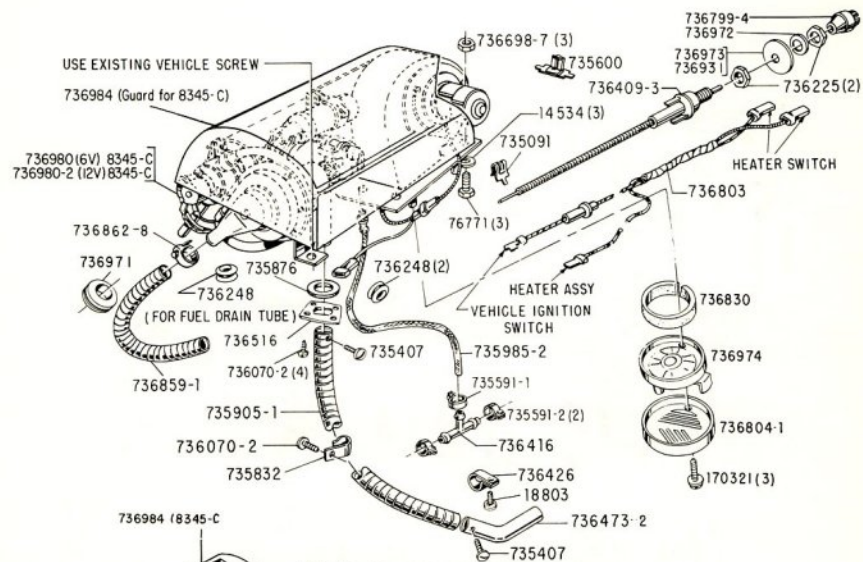


FIGURE 63 - KIT MODELS 8345-C and 8345-C12

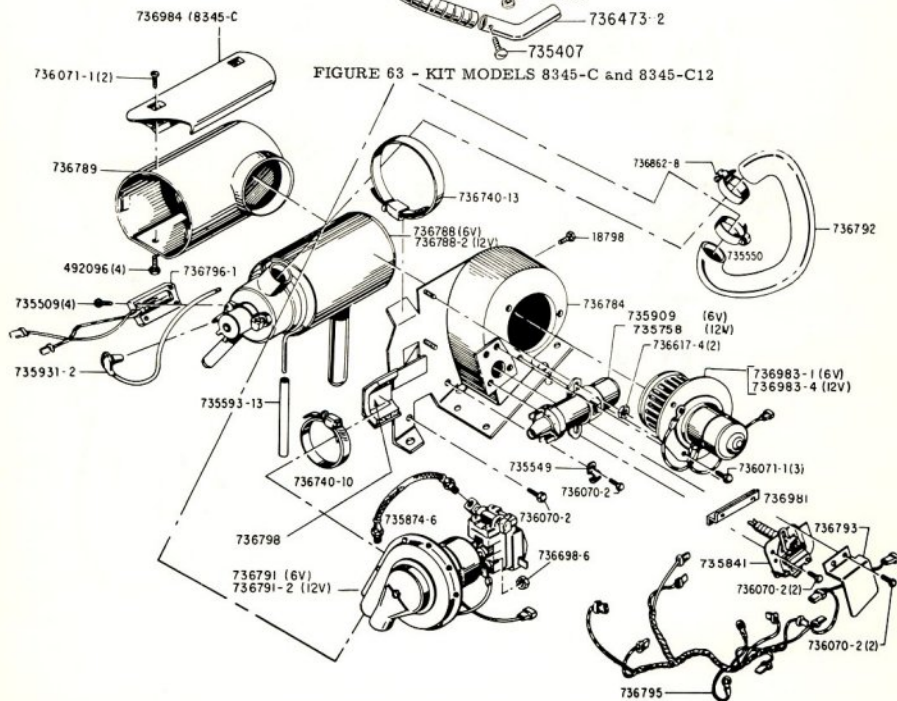


FIGURE 64 - HEATER ASSEMBLY 736798 and 736798-2 Used On 8345-C & 8345-C12

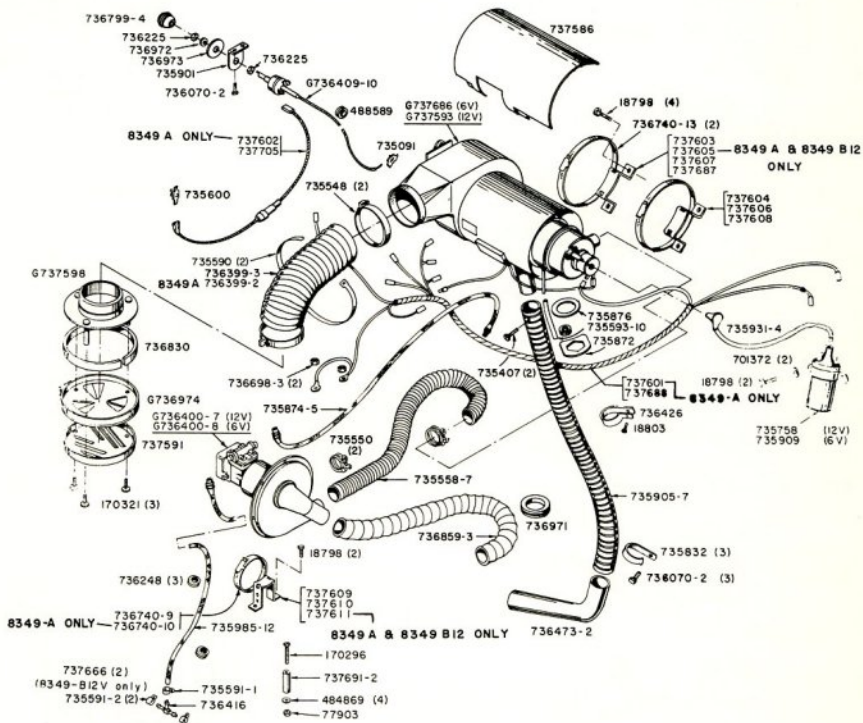


FIGURE 65 - KIT MODELS 8349-A, 8349-B6V, and 8349-B12V



HEATER KIT MODEL	*HEAT EXCHANGER & BURNER ASSY.	HEAT EXCHANGER	* BURNER ASSEMBLY
** 736076, 8330, 8331, 8332	736047-1	736048	736190-1
** 8330, 8331, 8332 (6V)	736376-1	736048	736190-5
8332 (12V), 8333	736376-2	736048	736190-6
8334 (6V)	736376-3	736375	736190-5
8334 (12V)	736376-4	736375	736190-6

* Reference Only. ** Using 736000 Heater*** Using 736624-1 Heater.


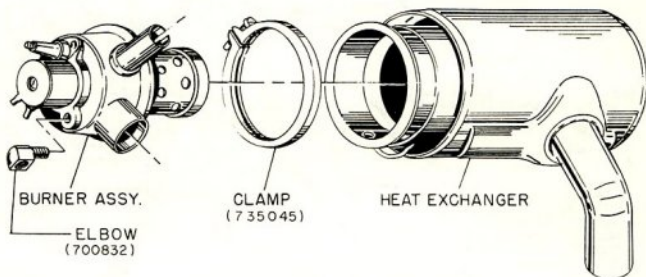


FIGURE - HEAT EXCHANGER & BURNER ASSEMBLY USED ON KIT MODELS 736076-8330-8331-8332-8333-8334

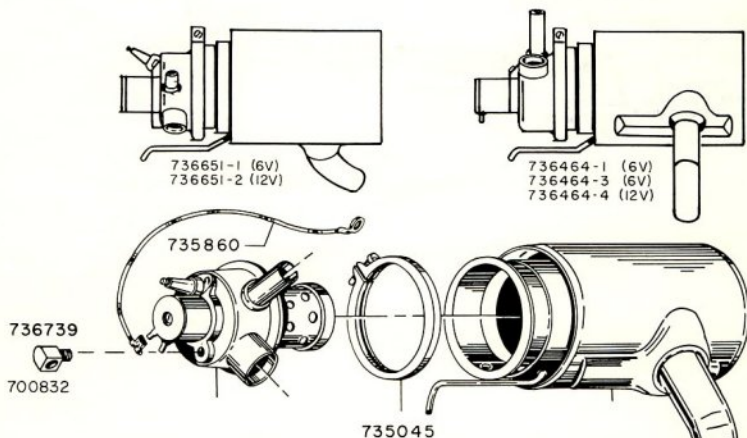

HEATER KIT MODEL	*HEAT EXCHANGER & BURNER ASSY.	HEAT EXCHANGER	* BURNER ASSEMBLY
8342, 8343	736464-1	736484-2	736190-7
8345, 8346 (6V)	736656-1	736655-2	736190-7
8346 (12V)	736656-2	736655-2	736190-9
8347 (6V)	736464-3	736484-2	736190-10
8347 (12V)	736464-4	736484-2	736190-15

* Reference Only.

FIGURE - HEAT EXCHANGER & BURNER ASSEMBLY USED ON KIT MODELS 8342-8343-8345-8346

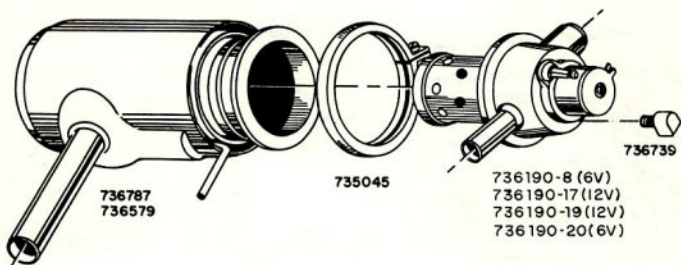


FIGURE 68 - HEAT EXCHANGER & BURNER ASSEMBLY 736788, 736788-2, 737584 and 737685 USED ON KIT MODEL 8345-B, 8345C, 8345C12, 8349-A, 8349-B6V, 8349-B12V

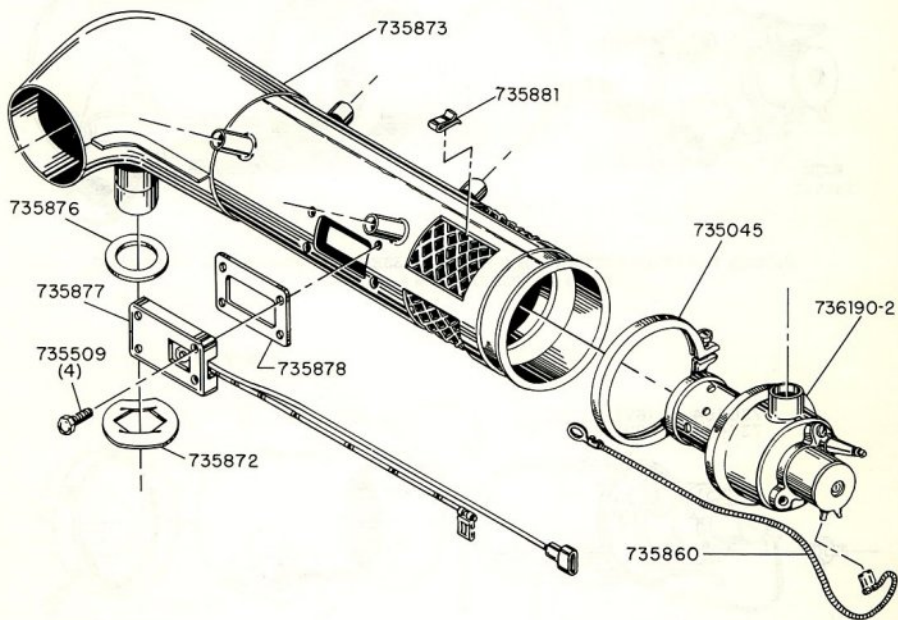


FIGURE 69 - HEATER ASSEMBLY FOR KIT MODELS 735900 & 8341

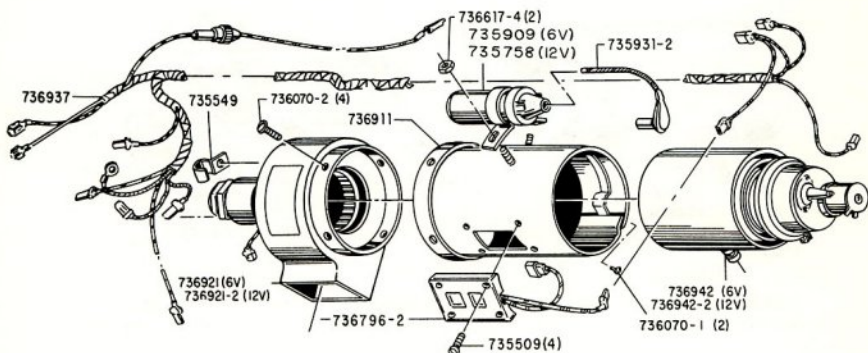


FIGURE 70 - HEATER ASSEMBLY 736910 (6V) & 736910-2 (12V)
(MODELS 8335 & 8335-12)

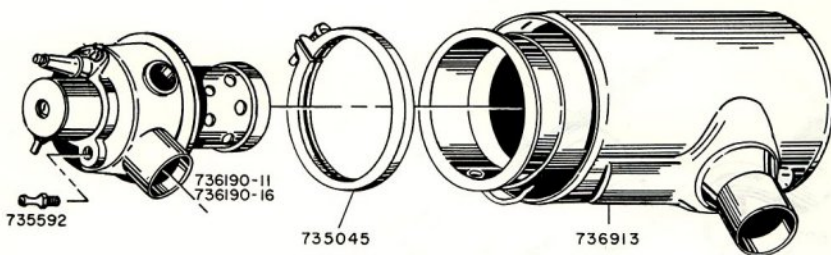


FIGURE 71 - HEAT EXCHANGER & BURNER ASSEMBLY 736942 (6V) & 736942 (12V)
USED ON MODELS 8335 and 8335-12

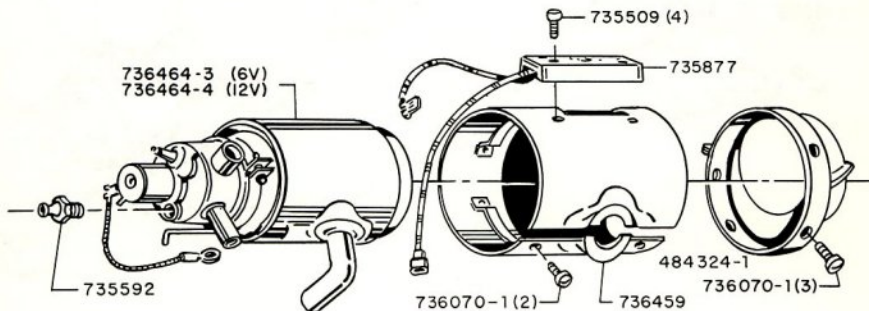


FIGURE 72 - MODEL 8347 HEATER ASSEMBLY 736884 (6V) & 736884-2 (12V)

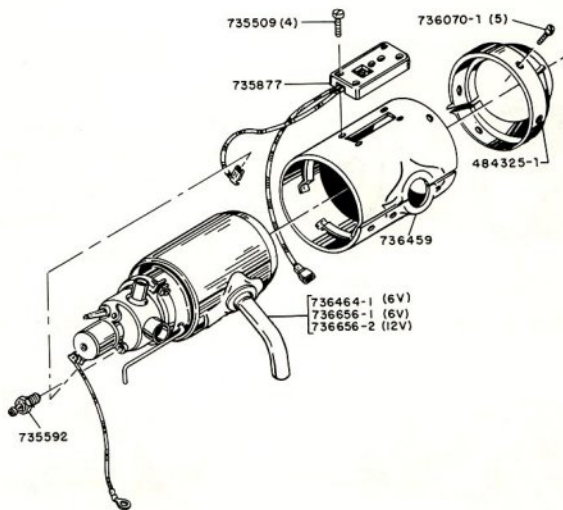


FIGURE 73 - HEATER ASSEMBLY FOR KIT MODELS 8342-8343 (736478)
8345-8346 (736653)

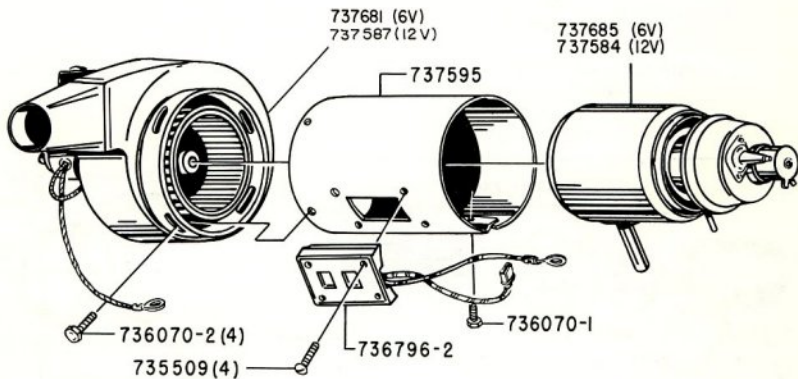


FIGURE 74 - HEATER ASSEMBLY 737593, 737686 USED ON 8349 A & B

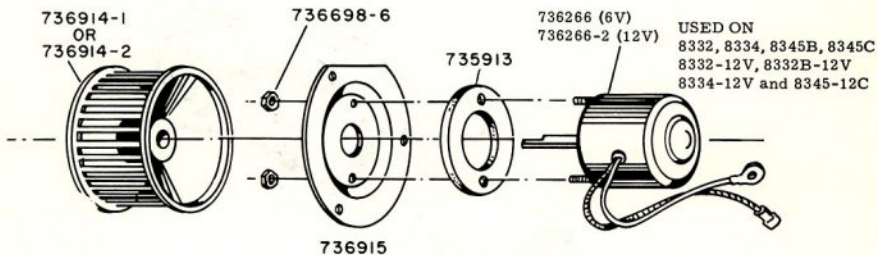


FIGURE 75 - VENTILATING AIR BLOWER & MOUNTING PLATE ASSEMBLY
736065, 736983-1, -2, -3, -4

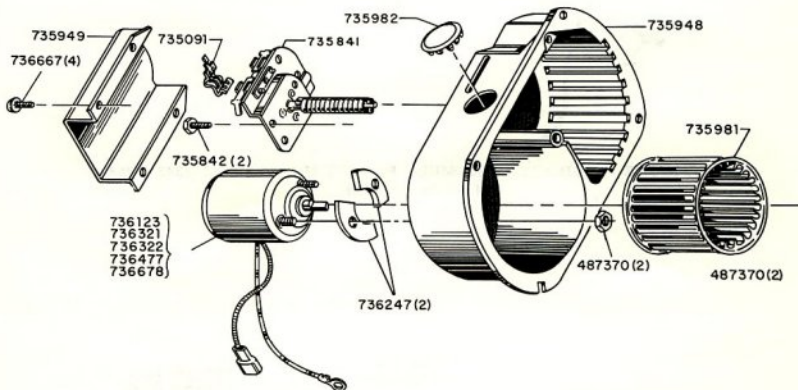


FIGURE 76 - VENT AIR BLOWER ASSEMBLY 735945, 736488 and 736654
USED ON KIT MODELS 735900, 8341, 8343, 8345

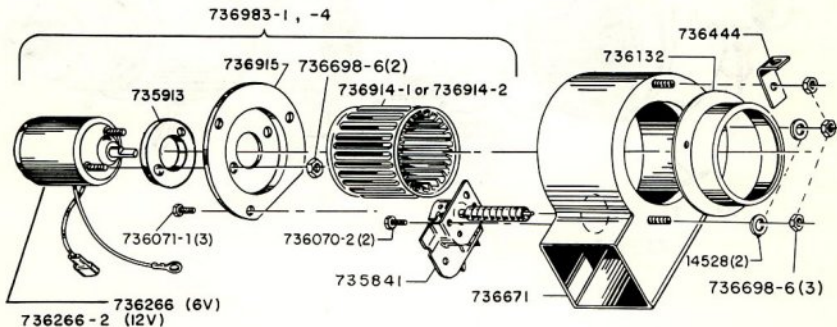


FIGURE 77 - VENTILATING AIR BLOWER ASSEMBLY 736469-736672
USED ON KIT MODEL 8342

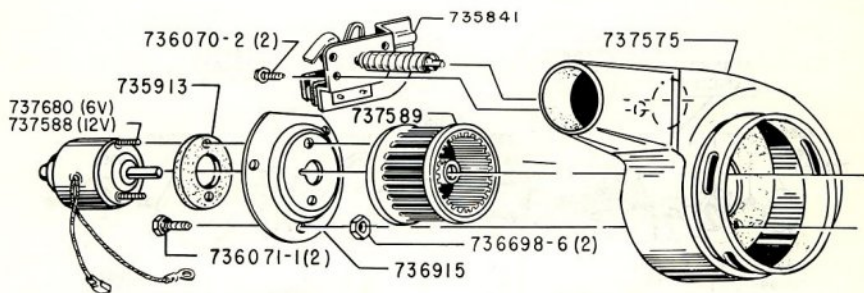


FIGURE 78 - VENTILATING BLOWER ASSEMBLY 737587-737681 AND SUBASSEMBLY 737585-737682 MODEL 8349 SERIES

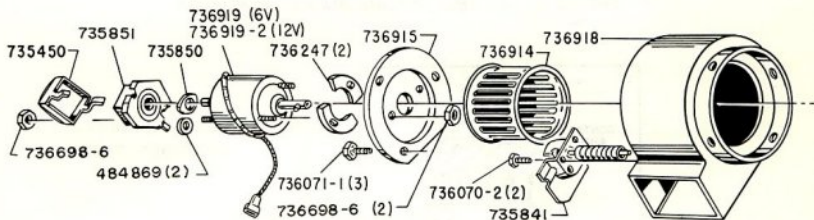


FIGURE 79 - VENTILATING BLOWER 736921 MODEL 8335 & 8335-12

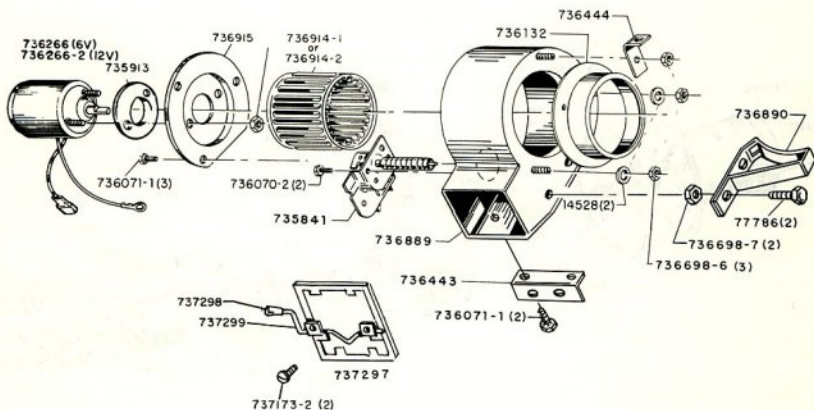


FIGURE 80 - VENTILATING BLOWER 736888-1 & 736888-2 USED ON MODEL 8347 & 8347-12

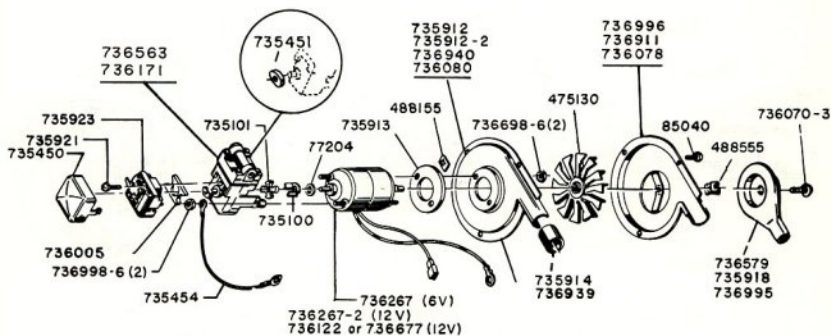


FIGURE 81 - COMBUSTION AIR BLOWER ASSEMBLY

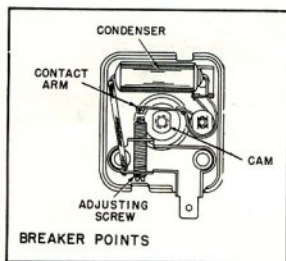


FIGURE 82 - BREAKER POINTS ASSEMBLY 735923

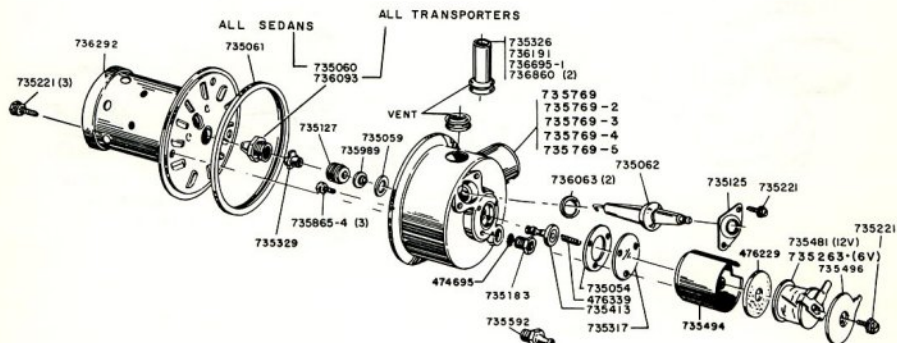


FIGURE 83 - BURNER ASSEMBLY

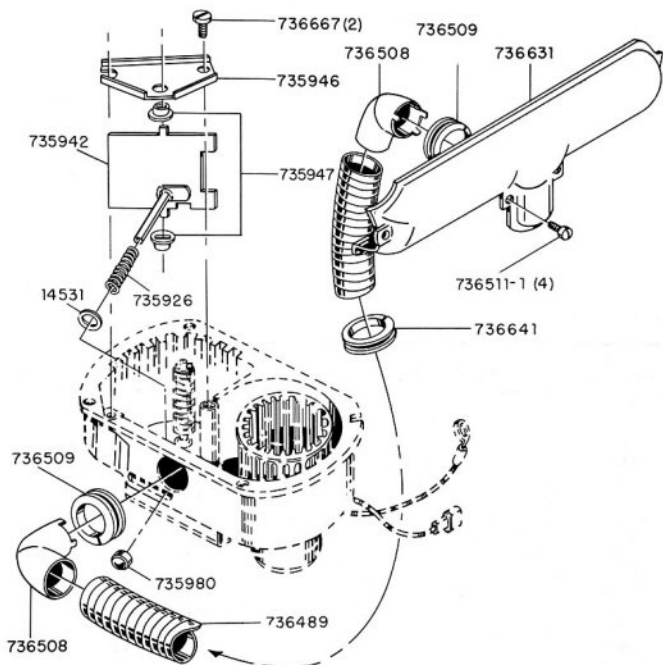


FIGURE 84 - DEFROSTER KIT (Part No. 736470)

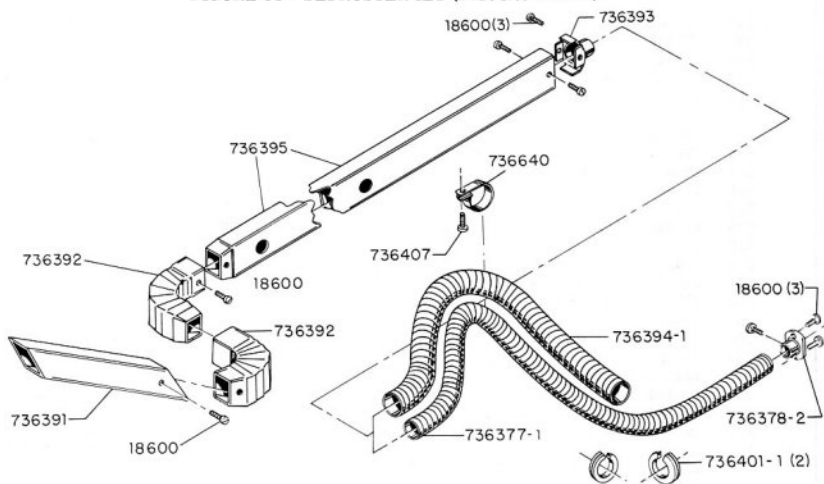


FIGURE 85 - AIR DISTRIBUTION ACCESSORY KIT (Pt. No. 736410)

APPLICATION CODE

Code	Kit Model	Code	Kit Model	Code	Kit Model
a	736076	i	736900	q	8332-B (12V)
b		j	8341	r	8335-6V & 8335-12V
b	8330	k	8342	s	8345-C (6V & 12V)
c	8331	l	8343	t	8347-6V & 8347-12V
d	8332	m	8345	u	8349-A (12V)
e	8330	n	8345-B (6V)	v	8349-B (6V)
f	8331	o	8346-6V & 8346-12V	w	8349-B (12V)
g	8332-6V & 8332-12V	p	8333		
h	8334-6V & 8334-12V				

	VW PART NO.	S-W PART NO.	DESCRIPTION	MODEL USED ON	REMARKS
ZVW	257 857	12529	Screw, No. 8-32 x 3/8	r
	257 501	12642	Screw, No. 10-32 x 3/8	n
	257 503	13133	Nut, 7/16 - 20 jam	h
		14522	Washer, No. 6 flat	h
		14526	Washer	o r t u v w
	504	14528	Washer, No. 10 flat	k m o t
	505	14531	Washer, Flat	r
	506	14534	Washer, No. 14 flat	efghijklmnopqst
	507	14536	Washer, 5/16 flat	bcefgqh
	508	18600	Screw, No. 10 x 3/8	oq
	509	18796	Screw, No. 10 x 1	i
	510	18798	Screw, No. 14 x 3/8	bceghijklmnorstuvw
	511	18803	Screw, No. 14 x 5/8	ijlmnoqstuvw
	512	42076	Nut, 5/16 - 18	abcdeghpq
	513	45569	Nut, No. 10-32	ad
	514	76713	Screw, No. 10-32 x 7/8	ad
	515	76771	Screw, 1/4 - 20 x 3/4	ns
	516	76961	Washer, 5/16 lock	bcef
	517	77786	Screw, 1/4 - 20 x 1/2	efghpt
	518	77817	Screw, 5/16 - 18 x 7/8	abcdeghpq
	519	77855	Screw, 5/16 - 18 x 1/2	adghp
	520	77903	Nut, No. 8-32	abcdeghpqw
	523	85040	Screw, No. 6 x 1/4	au
		170296	Screw, No. 8-32 x 1-3/4 SPHS ..	w
	524	170313	Screw, No. 10-32 x 1/2	k
	903	170321	Screw, No. 10-32 x 1 pan hd.	nsw
	526	171081	Nut, 1/4 - 20 Keps	hijps
	527	474695	Screen, Inlet	ALL	Also in 736009 Kit ..
	528	474995	Strap	ikr
	529	475130	Wheel, combustion blower	ALL
	530	476229	Washer	ALL
	531	476339	Spring, Valve	ALL
	532	477096	Washer	ALL
	533	484030	Valve, Fuel safety	h
	901	484085	Valve, Fuel safety	h
	534	484324-1	Adapter, Air Outlet ..	t
	535	484325-1	Adapter, 45° air outlet	klmo
	858	484869	Washer, Flat	rvw
	536	485185	Nut, 1/4-20 speed	jklm
	537	485682	Clamp, air duct	be
	538	486901	Rod, Quartz	h	Also part of 735974 .
	539	487280	Screw, 1/4 - 20 x 1/2	ijklms
	540	487282	Screw, 1/4 - 20 x 5/8	abcdeghp
	542	488155	Nut, No. 6 speed	ALL
	543	488290	Clamp	abcdeghlmop

	VW PART NO.	S-W PART NO.	DESCRIPTION	MODEL USED ON	REMARKS
ZVV	544	488555	Nut, No. 8 speed	ALL
	545	488589	Grommet	ALL
	859	489273	Clamp	r
	547	489544-1	Bracket	o
	548	490117	Nut, 1/4 - 20 acorn	ovw
	549	492053	Clamp	ijklm
	550	492096	Screw, No. 8 x 3/8	efghnp
	551	492371	Clip, Cable	efghp
	552	700832	Elbow, 90° Fuel	ALL	Used for 736739.
	904	701372	Washer, .250 I.D., .625 O.D. ..	uvw
	553	711229	Adapter, combustion air inlet ...	all except ght
	554	714994	Louver, air inlet	be
	555	735045	Clamp, Burner	ALL
		735054	Gasket, Coil Cup	ALL	Use 736009 Kit.
		735059	Gasket, Valve Seat	ALL	Use 736009 Kit.
	556	735060	Nozzle, Fuel	ijklmnrstuw
	557	735061	Gasket, Burner	ALL	Also in 736008 Kit. ...
		735062	Spark Plug	ALL	Use 736008 Kit.
	558	735063	Washer, Spark Plug	ALL	Also in 736008 Kit. .
	559	735091	Clamp, Control Cable	ALL
		735094	Clamp, Combustion air duct	abcd	Use 735550
	560	735097-1	Pad, Motor mounting	i
	561	735097-2	Pad, Motor mounting	i
		735100	Connector, Fuel pump	ALL	Use 735405 Kit.
		735101	Coupling, Fuel pump	ALL	Use 735405 Kit.
	562	735125	Retainer, Spark plug	ALL
	563	735127	Retainer, Valve seat	ALL
	564	735163	Clamp, Motor	i
	565	735183	Connector, Fuel	abcdi
	566	735213	Grommet	h
	567	735219	Nut, No. 10 speed	abcdi
	568	735221	Screw, No. 8-32 x 3/8	ALL
	569	735263	Coil, Fuel solenoid (6V)	ALL 6-volt	Used for 735986.
		735317	Disc, Sealing	ALL	Use 736009 Kit.
	570	735326	Tube, Vent	efghklmp
		735329	Spacer	ALL	Use 736009 Kit.
	571	735350	Clamp, exhaust	adij
	572	735405	Kit, Pump coupling	ALL
	573	735407	Screw, No. 10 x 5/8	ALL
		735413	Valve, Fuel	ALL	Use 736009 Kit.
	574	735450	Cover, Breaker points	ALL
	575	735451	Cam, Breaker points	ALL	Also part of pump ..
		735454	Wire Assembly	efghijklmp	Make from bulk.
	576	735481	Coil, Fuel solenoid (12-volt) ...	pt
	577	735494	Cup, Solenoid Coil	ALL
	578	735496	Cover, Solenoid Coil	ALL
	579	735509	Screw, No. 6 x 3/4	ALL
	580	735516	Clamp	k
	581	735531-2	Bracket	l
	582	735531-5	Bracket	kr
	583	735548	Clamp	bcfghijklmorsuvw
	584	735549	Clamp	abcdefghnpqrst
	585	735550	Clamp, combustion air duct	ALL
	860	735558-1	Duct, combustion air(1-1/4)x 27" ¹¹	r
	586	735558-2	Duct, combustion air(1-1/4)x 18" ¹¹	ilmop	Use for 735558-8 ..
	587	735558-3	Duct, combustion air(1-1/4)x 21" ¹¹	lm
	588	735558-4	Duct, combustion air(1-1/4)x 23" ¹¹	js
	905	735558-7	Duct, combustion air(1-1/4)x 31" ¹¹	r
		735558-8	Duct, combustion air(1-1/4)x 16" ¹¹	abcdefgopt	Use 735558-2
	861	735590	Clamp	rvw
	589	735591-1	Clamp, Fuel line	ALL	Supersedes 735591. .
	590	735591-2	Clamp, Fuel line	ALL	For VW fuel line ..

VW	S-W			
PART NO.	PART NO.	DESCRIPTION	MODEL USED ON	REMARKS
ZVW	591	735592 Connector, Fuel (push-on)	ijklmostr
	592	735593-1 Fuel Line (36 inch)	t
		735593-5 Fuel Line (40-inch)	js	Use 735593-9
	593	735593-9 Fuel Line (48-inch)	js	Use for 735593-5, -2
	594	735593-10 Fuel Line (4-inch)	jkuvw	Used as drain.
		735593-12 Fuel Line (44-inch)	k	Use 735593-9.
	595	735593-13 Fuel Line (5-1/2 inch)	nrs
	596	735600 Connector, 3-way wiring	abcdefghijklmnopqrsvuw
	598	735736 Kit, Fuel pump valve	all except pqs
	599	735758 Coil, Ignition (12V)	All 12V
	600	735769 Base, Burner	all except norstuw
	601	735769-2 Base, Burner	ns
	602	735769-3 Base, Burner	t
	862	735769-4 Base, Burner	r
	906	735769-5 Base, Burner	uw
	604	735832 Clamp, Duct support	klmno stuvw
	605	735841 Thermostat	ALL
	606	735842 Screw, No. 8-18 x 1/2	ijmo
	863	735850 Cam - Breaker Points	r
	864	735851 Breaker Points	r	(alt 735433)
		735860 Wire Assembly	ijklmot	Make from bulk ...
		735871 Heater Assembly	ij	Ref. only see Fig. 54
	607	735872 Retainer Exhaust gasket	ijko uvw
	608	735873 Exchanger, Heat	ij
	609	735874-1 Fuel Line (22-inch)	i
	610	735874-2 Fuel Line (12-inch)	abcdefghijklmnopq	Used for 735874-6 .
	611	735874-3 Fuel Line (18-inch)	h
	907	735874-5 Fuel Line	uw
		735874-6 Fuel Line (9-inch)	hus	Use 735874-2
	612	735876 Gasket, Exhaust	ALL
	613	735877 Switch, Overheat	kjklmot
	614	735878 Gasket, Overheat switch	ij
	615	735881 Clip, Wiring	ij
	617	735901 Bracket, Switch mounting	ijklm rtuvw
	618	735902 Clamp, Cable support	i
	619	735904 Clamp, Exhaust	abcdefghijklmnop
	620	735905-1 Tube, Exhaust flex. (21-inch) ...	dghimnpqrs	Used for 735905-6, -8
	621	735905-3 Tube, Exhaust flex. (30-inch) ...	a
	622	735905-4 Tube, Exhaust flex. (10-inch) ...	cf	Used for 735905-5 .
		735905-5 Tube, Exhaust flex. (6-inch) ...	j	Use 735905-4 .
		735905-6 Tube, Exhaust flex. (19-inch) ...	kl	Use 735905-1.
	908	735905-7 Tube, Exhaust flex. (46-inch) ...	uvw
		735905-8 Tube, Exhaust flex. (22-inch) ...	o	Use 735905-1
	623	735906 Duct, Hot air (3-1/2 I.D. -21 lg.)	i
	624	735907 Knob, switch	abcdefghijklmnopqr	736799 can be used.
	625	735909 Coil, Ignition (6-volt)	all 6v except t
	626	735911 Housing, comb. blower half	efghijklmnop
	627	735912 Housing, comb. blower half	efghijklmopt
	628	735912-2 Housing, comb. blower half	n
	629	735913 Spacer, Motor	all except r
	630	735914 Collar	all except r
		735915-1 Blower, combustion air	efh	ref. only see Fig. 81
		735915-2 Blower, combustion air	p	ref. only see Fig. 81
		735915-3 Blower, combustion air	k	ref. only see Fig. 81
		735915-4 Blower, combustion air	il	ref. only see Fig. 81
		735915-7 Blower, combustion air	g	ref. only see Fig. 81
		735915-9 Blower, combustion air	qq	ref. only see Fig. 81
	632	735918 Shield, combustion air inlet	i
	633	735921 Screw, No. 8-32 x 5/8	ALL
	634	735923 Breaker Points Assembly	ALL
	635	735926 Spring, actuator	r
	636	735927 Plate, Vent Blower mounting	i

VW PART NO.	S-W PART NO.	DESCRIPTION	MODEL USED ON	REMARKS
ZVW 637	735931-1	Cable, Ignition (22-inch)	ikot
638	735931-2	Cable, Ignition (10-inch)	abcddefgnpqr
639	735931-3	Cable, Ignition (15-inch)	hj
640	735931-4	Cable, Ignition (12-inch)	m uvw
641	735932	Saddle, combustion blower	i
642	735933	Bracket, combustion blower	i
643	735941	Harness, Wiring	i
644	735942	Damper Assembly	r
	735945	Blower, Ventilating air	ij	ref. only see Fig. 76
645	735946	Bracket, damper mounting	r
646	735947	Bushing, pivot	r
647	735948	Housing, ventilating blower	ijlm
648	735949	Guard, Thermostat	ijlm
649	735972	Switch, Safety valve reset	h
650	735974	Switch, flame detector	h
652	735980	Cap, damper control	r
653	735981	Wheel, ventilating blower	ijlm
654	735982	Plug, Housing	ijlm
655	735985-1	Fuel Line (14-inch)	i
656	735985-2	Fuel Line (39-inch)	adghnpqs
657	735985-4	Fuel Line (103-inch)	be
658	735985-5	Fuel Line (140-inch)	cf
659	735985-6	Fuel Line (44-inch)	mo r
	735985-9	Fuel Line (10-inch)	r	Use 735985-1
909	735985-12	Fuel Line (56-inch)	uvw
	735985-13	Fuel Line (36-inch)	kl	Use 735985-2
	735985-14	Fuel Line (33-inch)	mo	Use 735985-2
	735985-15	Fuel Line (72-inch)	t	Use 735985-4
	735986	Coil, Fuel solenoid (6V)	All 6-volt	Use 735263
	735989	Seat, Valve	ALL	Use 736009 Kit
	736000	Heater and Bracket Assembly	abcd	ref. only see Fig. 16
661	736005	Gasket and Breaker Points	ALL
662	736008	Kit, Spark Plug	ALL
663	736009	Kit, Burner Service	ALL
	736040-5	Wire Assembly (130-inch)	abcddeghpq	Make from bulk ..
	736040-13	Wire Assembly (12-inch)	abcd	Make from bulk ..
	736040-15	Wire Assembly (156-inch)	be	Make from bulk ..
	736040-16	Wire Assembly (135-inch)	cf	Make from bulk ..
	736040-17	Wire Assembly (68-1/2 inch)	cf	Make from bulk ..
	736040-23	Wire Assembly (52-inch)	adghpq	Make from bulk ..
	736047-1	Exchanger and Burner Assembly	abcd
664	736048	Exchanger, Heat	abcddefgp
	736059	Tube, Exhaust	acf	Use 736578
665	736052	Cover and Spacer Assembly	abcd
666	736055	Cover and Spacer Assembly	abcd
667	736060	Switch, overheat	abcddefgqrstuvw
668	736062	Bracket, Heater mounting	abcd
669	736064	Housing, Ventilating Blower	abcddefgh k p
	736065	Blower, Ventilating Air	abcddefgh kno	ref. only see fig. 75
670	736066	Wheel, Ventilating Blower	abcddefgh knop	Can use 736914-1.
671	736067	Plate, Vent. Blower Mounting	abcddefgh knop
672	736068	Spacer	adghp
673	736069-1	Relay (6-volt)	abcddefgh
674	736069-2	Relay (12-volt)	p
675	736070-1	Screw, No. 8 x 1/4	gklmoqrstuvw
676	736070-2	Screw, No. 8 x 3/8	ALL
677	736070-3	Screw, No. 8 x 1/2	ALL
678	736071-1	Screw, No. 10 x 3/8	abcddefgh knopqrstv
679	736071-2	Screw, No. 10 x 1/2	cf
680	736071-3	Screw, No. 10 x 5/8	abcd
681	736072	Grommet, Inlet	abcddefghkp
682	736073	Harness, Wiring	abcddefgpp

VW PART NO.	S-W PART NO.	DESCRIPTION	MODEL USED ON	REMARKS
ZVW	736075-1	Blower, Combustion Air	abcd	ref. only see fig. 81
683	736078	Housing, Comb. Blower Half	abcd
684	736080	Housing, Comb. Blower Half	abcd
685	736086	Cap, Breaker Points	i
686	736089	Bolt and Plate Assembly	adghp
688	736093	Nozzle, Fuel	abcdefghp
689	736095	Duct, Ventilating Air	adghp
690	736101	Adapter, Duct to Blower	adghp
	736102-1	Wire Assembly (58-inch).....	abcdefghp	Make from bulk ..
	736102-2	Wire Assembly	q	Make from bulk ..
691	736120	Clamp	klmo
692	736122	Motor, Combustion Air	p	.. Use 736677 ...
693	736123	Motor, Ventilating Air	p	.. Use 736678 ...
694	736132	Adapter, Blower Inlet	k o t
865	736171	Pump, Fuel (12V)	r
	736190-1	Burner Assembly	abcd	ref. only see fig. 66-67
	736190-2	Burner Assembly	ij	ref. only see fig. 66-67
	736190-5	Burner Assembly	efgh	ref. only see fig. 65-67
	736190-6	Burner Assembly	ph	ref. only see fig. 66-67
	736190-7	Burner Assembly	klmo	ref. only see fig. 66-67
	736190-8	Burner Assembly	ns	ref. only see fig. 65-67
	736190-9	Burner Assembly	t	ref. only see fig. 66-67
	736190-10	Burner Assembly	r	ref. only see fig. 66-67
	736190-11	Burner Assembly	t	ref. only see fig. 66-67
	736190-15	Burner Assembly	t	ref. only see fig. 66-67
	736190-16	Burner Assembly	r	ref. only see Fig 66-67
	736190-17	Burner Assembly	t	ref. only see fig. 66-67
	736190-19	Burner Assembly	uw	ref. only see fig. 66-67
	736190-20	Burner Assembly	v	ref. only see fig. 66-67
696	736191	Vent	abcdij
697	736201	Gasket, Exhaust	ad
698	736202	Retainer, Exhaust Gasket	ad
	736209	Tube, Exhaust	a	Use 736578
	736213	Thermostat	abcd	Use 735841
699	736218	Distribution Chamber	adghp
700	736220	Plate	adg
701	736225	Nut, 7/16 - 28 jam	ALL
702	736237	Bracket, Heater mounting	i
703	736238	Bracket, Heater mounting	i
704	736239	Seal, Combustion Air	i
705	736241	Shield, Heater	ij
706	736247	Spacer, Motor	ALL
707	736248	Grommet	hijlmnorstuvw
708	736266	Motor, Ventilating Air (6V)	ALL
898	736266-2	Motor, Ventilating Air (12V).....	ALL	ref. only see fig. 66-67
709	736267	Motor, Combustion Air (6V).....	ALL
899	736267-2	Motor, Combustion Air (12V).....	ALL
711	736292	Mixer Assembly	ALL
712	736340	Screw, 1/4 - 20 x 1-1/2	abcdefghpq
	736344	Blower, Ventilating Air	p
713	736349	Clamp, Exhaust Support	ij
714	736358	Spacer	h
715	736375	Exchanger, Heat	h
	736376-1	Exchanger, and Burner Assy.	efg
	736376-2	Exchanger, and Burner Assy.	pq
	736376-3	Exchanger, and Burner Assy.	h
	736376-4	Exchanger, and Burner Assy.	h
716	736377-1	Duct, Hot Air (1-3/4 I. D. -52 lg.)	q
717	736378-2	Adapter, Duct	beoq
	736380	Heater and Bracket Assembly	h
718	736382-1	Duct, Hot Air (1-3/4 I. D. -61 lg.)	be
719	736384	Shield, Air Inlet	be
720	736387	Duct, Hot Air	be

	VW	S-W			
	PART NO.	PART NO.	DESCRIPTION	MODEL USED ON	REMARKS
ZVW	721	736388	Duct, Hot Air	be
	722	736389	Bracket, Heater support	be
	723	736390	Adapter, Duct to Blower	beef
	729	736396	Tube, Exhaust	j
	730	736398	Screw, No. 10-32 x 3/4	h
	731	736399-1	Duct, Hot air (3-1/2 I. D., 27 lg.)	j
	910	736399-2	Duct, Hot air	u
	934	736399-3	Duct, Hot air	vw
	935	736399-4	Duct, Hot air	q
		736400-1	Blower, Combustion Air	j	ref. only see fig. 81
		736400-4	Blower, Combustion Air	nw	ref. only see fig. 81
		736400-7	Blower, Combustion Air (12V)....	w	ref. only see fig. 81
		736400-8	Blower, Combustion Air (6V)....	v	ref. only see fig. 81
	732	736401-1	Grommet	beg
	733	736404	Bracket, Heater mounting	j
	734	736405	Bracket, Combustion Blower	j
	735	736406	Bracket, Heater mounting	j
	736	736408	Harness, Wiring	j
	737	736409-1	Switch and Control Cable (96-3/4")	be
	738	736409-2	Switch and Control Cable (74")...	cf
	739	736409-3	Switch and Control Cable (18")...	ns
	740	736409-4	Switch and Control Cable (130")...	adghp
	741	736409-5	Switch and Control Cable (30")...	ijklm
	742	736409-6	Switch and Control Cable (15-3/16")	o
	866	736409-9	Switch and Control Cable 25"....	r
	932	736409-10	Switch and Control Cable.....	uvw
	743	736411-1	Duct, Hot Air (4 I. D., 12 long) ..	be
	744	736411-2	Duct, Hot Air (4 I. D., 50 long) ..	cf
		736411-3	Duct, Hot Air (4 I. D., 18 long) ..	ko	Use 736411-5
	745	736411-5	Duct, Hot Air (4 I. D., 20 long) ..	lm	Use for 736411-3
	747	736414	Plate, Vent Blower Mounting	j
	748	736415	Harness, Wiring	h
	749	736416	Tee, Fuel	ALL
	750	736421	Bracket, Heater Support	cf
	751	736422	Guard, Heater	cf
	752	736423	Tube, Exhaust extension	cf
	753	736424	Adapter, Ventilating Air	cf
	754	736425	Louver and Baffle Assembly	cf
	755	736426	Clamp, Exhaust Support.....	ijklmo stuvw
	756	736427	Bracket, Exhaust	ijklm
	757	736428	Fuel Pump	n	Use 736563
	758	736429	Retainer, Exhaust Gasket	js
	759	736430	Gasket, Exhaust	js
	760	736442	Distributor, Air	ko
	761	736443	Bracket, Blower Support	kot
	762	736444	Bracket, Blower Support	kot
	763	736445	Guard, Thermostat	k
	764	736448	Grommet - wiring	h
	765	736454	Screw, No. 8 x 3/8	h
	766	736459	Housing, Heater	klmot
		736464-1	Exchanger and Burner Assembly .	kl
		736464-3	Exchanger and Burner Assembly .	t
		736464-4	Exchanger and Burner Assembly .	t
		736469	Blower, Ventilating Air	k
	767	736471	Grommet	k
	768	736473	Tube, Exhaust extension	klm
	769	736473-2	Tube, Exhaust extension	nstuv	Similar to 736473 .
	770	736474	Harness, Wiring	k
		736478	Heater Assembly	kl
	771	736484	Exchanger, Heat	kl	736484-2 can be used
	772	736484-2	Exchanger, Heat	kl	736484 can be used
	773	736486	Duct, Combustion Air	k
		736488	Blower, Ventilating Air	l	ref. only see fig.76
	775	736494	Box, Air Intake	h
	776	736496	Harness, Wiring	l	Similar to 736642

VW		S-W		DESCRIPTION	MODEL USED ON	REMARKS
PART NO.	PART NO.					
ZVW	777	736498		Bracket, Heater Mounting.....	l
	780	736511-1		Screw, No. 10 x 3/8.....	q
	781	736515		Plate, Vent Blower Mounting.....	lm
	782	736516		Retainer, Exhaust Gasket.....	lmnrst
		736546		Coil, Ignition.....	j	Use 735909.....
	783	736563		Fuel Pump Assembly.....	efghijklmop
	784	736578		Extension, Exhaust.....	bcdefghpq
		736579		Adapter, Combustion Air Inlet ..	All except i	Use 711229.....
	785	736595		Bracket, Heater.....	efghp
		736598		Thermostat.....	efghijklmnopqrst	Use 735841.....
		736598-3		Thermostat.....	ouvw	Use 735841.....
	786	736604		Housing, Heater.....	h
	787	736605		Cover, Burner.....	h
	788	736606		Duct, Combustion Air.....	h
	789	736611-1		Duct, Air Intake (4 I.D., 92 lg.)	h
	790	736617-4		Nut, Lock.....	efghnpqrs
	792	736623		Housing, Heater.....	efgpq
		736624-1		Heater and Bracket Assembly ...	ef	ref. only see fig. 49
		736624-2		Heater and Bracket Assembly....	p	ref. only see fig. 46
	793	736625		Terminal, Female.....	bcdefghpq
	796	736633		Switch, Overheat.....	h
	799	736642		Harness, Wiring.....	mo	Similar to 736496.
	800	736646		Shroud, Heater.....	lm
	801	736647		Bracket, Blower.....	l
	802	736649		Bracket, Heater.....	m
	803	736650		Bracket, Heater.....	m
	804	736652		Shroud, Heater.....	kot
		736653		Heater Assembly.....	mo	ref. only see fig. 57&60
		736654		Blower, Ventilating Air.....	m	ref. only see fig. 57
	805	736655		Exchanger, Heat.....	mo	736655-2 can be used
	806	736655-2		Exchanger, Heat.....	mo	736655 can be used
		736656-1		Exchanger and Burner Assy (6v)	mo
		736656-2		Exchanger and Burner Assy (12v)	o
	807	736657-1		Bracket, Blower.....	m
	808	736657-2		Bracket, Blower.....	k
		736665		Screw, No. 8 x 3/8 truss hd type ^A	ns
	809	736667		Screw, No. 8-18 x 1/2.....	ijlms
	810	736669		Spacer, Heater Bracket.....	o
	811	736670		Guard, Thermostat.....	o
	812	736671		Housing, Ventilating Blower....	o
		736672		Blower, Ventilating Air.....	o	ref. only see fig. 60
	813	736673		Bracket, Heater.....	o
	814	736674		Elbow, Exhaust.....	o
	815	736676		Bracket, Blower.....	o
	816	736677		Motor, Combustion Air.....	p	Alternate is 736122
	817	736678		Motor, Ventilating Air.....	p	Alternate is 736123
	819	736695-1		Vent - burner.....	nts
	867	736698-3		Nut, No. 8-32 hex.....	ruvw
	820	736698-6		Nut, No. 10-32 self-locking....	ALL
	821	736698-7		Nut, 1/4-20.....	ALL
		736739		Elbow, 90° Fuel.....	gh qs uvw	Use 700832.....
		736740-1		Clamp.....	v
	936	736740-9		Clamp.....	w
	822	736740-10		Clamp.....	nrstu
	823	736740-13		Clamp.....	ghqrstuvw
		736783		Heater and Bracket Assy.....	n	ref. only see fig. 58
	824	736784		Bracket, Heater.....	ns
	825	736787		Exchanger, Heat.....	ns
		736788		Exchanger and Burner Assy.....	ns	ref. only see fig. 64
	826	736789		Housing, Heater.....	ns
		736791		Blower, Combustion Air.....	ns	ref. only see fig. 64
	827	736792		Duct, Combustion Air.....	ns
	828	736793		Guard, Thermostat.....	n

VW PART NO.	S-W PART NO.	DESCRIPTION	MODEL USED ON	REMARKS
ZVV	829 736794	Guard, Exchanger	n
	830 736795	Harness, Heater Wiring	n
	831 736796-1	Switch, Overheat	ns
		736796-2 Switch, Overheat	ruvw	Use 736796-1
	832 736798	Cushion, Motor	nst
	833 736799	Knob, Switch	ijklmno	Can use 736799-3 or -4 .
	834 736799-3	Knob, Switch	ijklmno	Can use 736799 or -4 .
	888 736799-4	Knob, Switch	o s t u w	Can use 736799 or -3 .
	836 736803	Harness, Power Wiring	n s
		736804-1 Louver Plate	n s	Use 736832
	953 736830	Spacer, Gasket	n s u v w
	837 736832	Louver Assembly	n
	838 736859-1	Duct, Combustion Air (16" long) ..	n s
	911 736859-3	Duct, 1-1/2 I. D. flex (20" long) ..	u v w
	937 736859-4	Duct, Flex. 1-1/2 I. D.	q v
		736860 Plug	r
	839 736862-8	Clamp	n s
	840 736865-4	Screw, No. 6-32 x 5/8	ALL
		736884 Heater Assembly (6V)	t	ref. only-See fig. 72
		736884-2 Heater Assembly (12V)	t	ref. only-See fig. 72
	841 736885	Tube, Exhaust	t
	842 736886	Bracket	t
	843 736887	Bracket	t
		736888-1 Blower Assembly, Vent Air (6V) ..	t	ref. only-see fig. 80
		736888-2 Blower Assembly, Vent Air (12V) ..	t	ref. only-see fig. 80
	844 736889	Housing, Vent Blower	t
		736890 Bracket, Blower Mounting	t
	846 736891-1	Tube, Exhaust Extension	t
	848 736893	Wiring Harness	t
	849 736895	Insulator, Relay	abcdefghpq
	850 736896	Nut, No. 8-32 knurled	abcdefghpq
	851 736907	Bracket, Air Cleaner	ghp	for 1500 cc only ...
		736910 Heater Assembly (6V)	r	Ref. only
		736910-2 Heater Assembly (12V)	r
	868 736911	Housing, Heater	r
	869 736913	Exchanger Assembly	r
	870 736914-1	Wheel, Ventilating Blower	ghoqrst
	871 736915	Plate, Motor mounting	ghoqrstv
	872 736918	Housing, Vent Blower	r
	873 736919	Motor (6V) - vent air	r
	900 736919-2	Motor (12V) - vent air	r
		736920 Motor & Blower Assy (6V)	r	ref. only see fig. 79
		736920-2 Motor & Blower Assy (12V)	r	ref. only see fig. 79
		736921 Blower Assembly, Vent (6V)	r	ref. only see fig. 79
		736921-2 Blower Assembly, Vent (12V)	r	ref. only see fig. 79
	874 736924	Bracket - heater mounting	r
	875 736925	Guard - heater	r
	876 736930	Tube, Exhaust Extension	r
	877 736934	Guard - Exhaust	r
	878 736936	Gasket, "O" Ring - Exhaust	r
	879 736937	Wiring Harness	r
	880 736939	Collar	r
	881 736940	Housing, Comb. blower	rt
		736942 Heat Exchanger & Burner Assy ..	r	ref. only see fig. 71
		736942-2 Heat Exchanger & Burner Assy ..	r	ref. only see fig. 71
	882 736943	Sleeve	r
	883 736944	Fuel Line (15 ft.)	r
	884 736945-1	Screw, 1/4 - 20 x 1/2 truss hd. ..	r
	885 736947	Cover	r
	886 736948	Sleeve, Exhaust	r
		736949-1 Relay	gh	Use 736069-1
		736949-2 Relay	ghq	Use 736069-2
	889 736966	Duct, Combustion Air	gq
	954 736967	Duct	h
	890 736971	Grommet	suvw
	891 736972	Washer, Flat	ostuvw
	892 736973	Plate, Switch	ostuvw
	912 736974	Shutter Assembly	s uvw
	893 736981	Bracket, Guard mounting	s

VW PART NO.	S-W PART NO.	DESCRIPTION	MODEL USED ON	REMARKS	
ZVW	736982	Screw, 1/4 - 14 x 3/8 type "B" ..	s	
	736983-1	Vent Blower (6V)	ghost	ref. only. see fig. 77	
	736983-4	Vent Blower (12V)	ghost	ref. only. see fig. 77	
894	736984	Guard, Heater	s	
895	736995	Inlet Adapter	gh st u vw	
896	736996	Housing, Blower Half	qrt u vw	
955	737105	Plate, Retainer.....	h	
	737106-1	Tube, Exhaust Extension.....	r	
	737173-1	Screw, No. 8 x 1/4 hexhd SM type "A"	u	
	737173-2	Screw, No. 8 x 3/8 hexhd SM type "A"	ghqt	
	737297	Shutter Assembly.....	t	
	737298	Knob	t	
	737299	Lever	t	
	737303	Distributor Assembly	t	
913	737575	Housing, Vent. Blower	uvw	
914	737579	Heat Exchanger.....	uvw	
	737584	Heat Exchanger Assembly (12V)..	u w	ref. only. see fig. 74	
915	737586	Shroud, Heater.....	vw	
	737587	Blower Assy, Vent (12V)	uw	ref. only. see fig. 78	
916	737588	Motor, Vent. Air (12V).....	uw	
917	737589	Wheel, Vent Blower.....	uvw	
918	737591	Louver Plate.....	uvw	
	737593	Heater Assembly (12V)	w	ref. only. see fig. 74	
919	737595	Housing, Heater	uvw	
920	737598	Flange.....	vw	
921	737601	Harness, Wiring	u	
922	737602	Cable, with fuse	u	
923	737603	Bracket, Heater Mounting (rear)..	uvw	
924	737604	Bracket, Heater Mounting (front)..	uvw	
925	737605	Bracket, Heater Mounting (rear)..	uvw	
926	737606	Bracket, Heater Mounting (front).	uvw	
927	737607	Bracket, Heater Mounting (rear) .	uvw	
928	737608	Bracket, Heater Mounting (front).	uvw	
929	737609	Bracket, Combustion Blower.....	uvw	
930	737610	Bracket, Combustion Blower.....	uvw	
931	737611	Bracket, Combustion Blower.....	uvw	
939	737644	Plate and Bolt Assembly.....	q	
940	737649	Plate, Wheel well cover	q	
	737666	Clamp	w	
941	737680	Motor (6V).....	v	
	737681	Blower Assembly, Vent. (6V)....	v	ref. only. see fig. 78	
	737685	Heat Exchanger Assy (6V)	v	ref. only. see fig. 74	
	737686	Heater Assembly (6V)	v	ref. only. see fig. 74	
942	737687	Bracket, Heater Mounting	vw	
943	737688	Harness, Wiring	vw	
944	737689	Adapter, Outlet.....	q	
945	737690	Blower Housing and Bracket	q	
946	737691-1	Spacer	q	
947	737691-2	Spacer, 1-3/8 long	vw	
948	737702	Adapter, Blower	q	
ZVW	949	737705	Cable, with fuse	v

